
Position of Parts in Instrument Panel

[RHD]

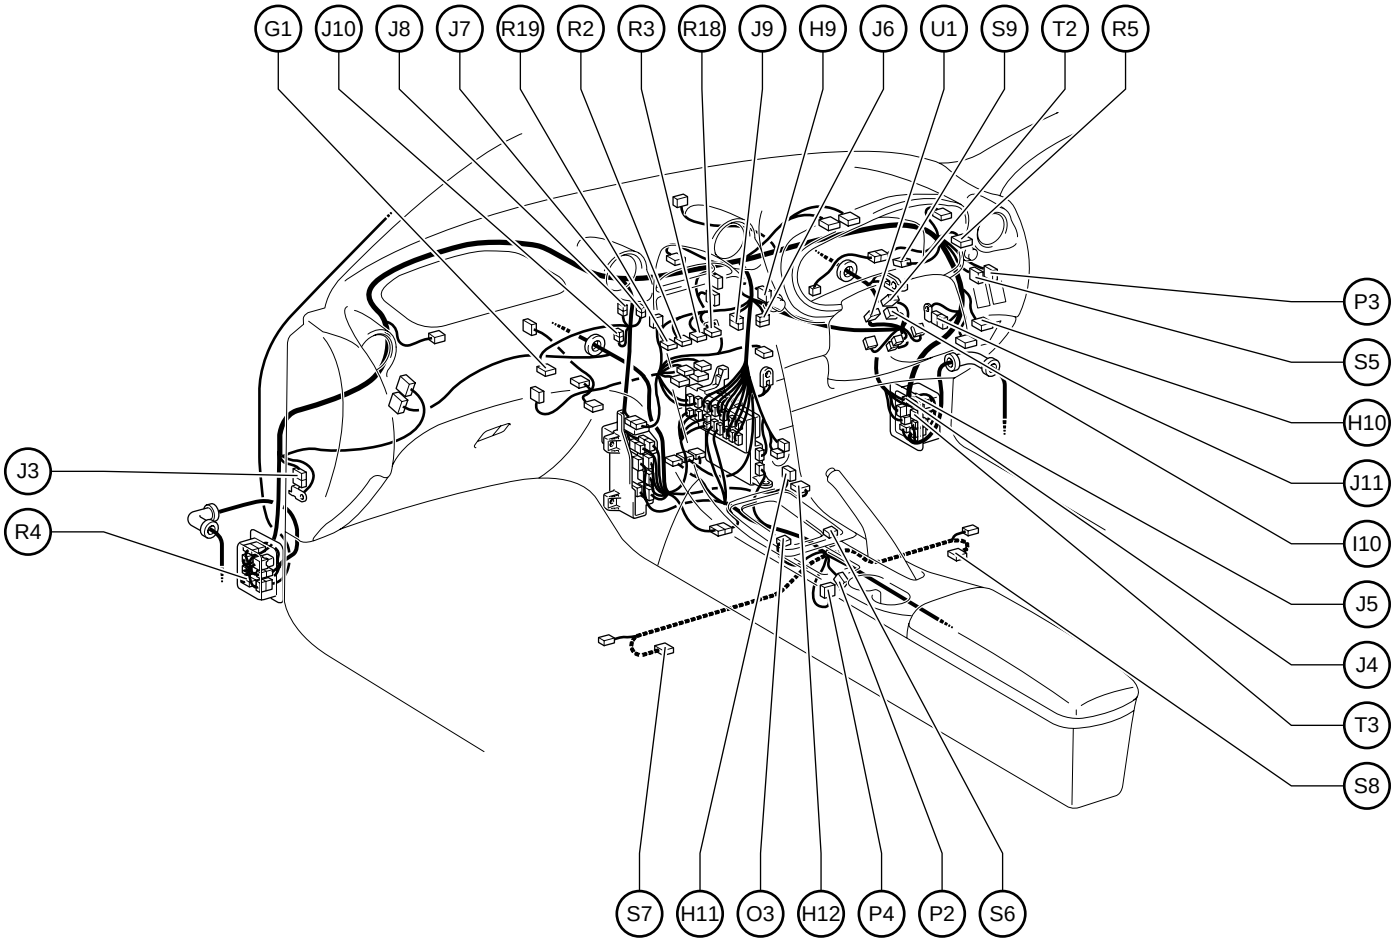

G 1 Glove Box Light and SW

H 9 Hazard SW
H10 Headlight Beam Level Control SW
H11 Heated Oxygen Sensor (Bank 1 Sensor 1)
H12 Heated Oxygen Sensor (Bank 1 Sensor 2)

I 10 Ignition SW

J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector

O 3 O/D Main SW

P 2 Parking Brake SW
P 3 Power Window Lock SW
P 4 Power Window Master SW

R 2 Radio and Player
R 3 Radio and Player
R 4 Rear Fog Light Relay
R 5 Rheostat
R18 Radio and Player
R19 Radio and Player

S 5 Security Indicator
S 6 Shift Lock Control ECU
S 7 Side Airbag Squib LH
S 8 Side Airbag Squib RH
S 9 Stop Light SW

T 2 Transponder Key Amplifier
T 3 Turn Signal Flasher Relay

U 1 Unlock Warning SW