
Position of Parts in Engine Compartment

[RHD 2ZZ–GE]

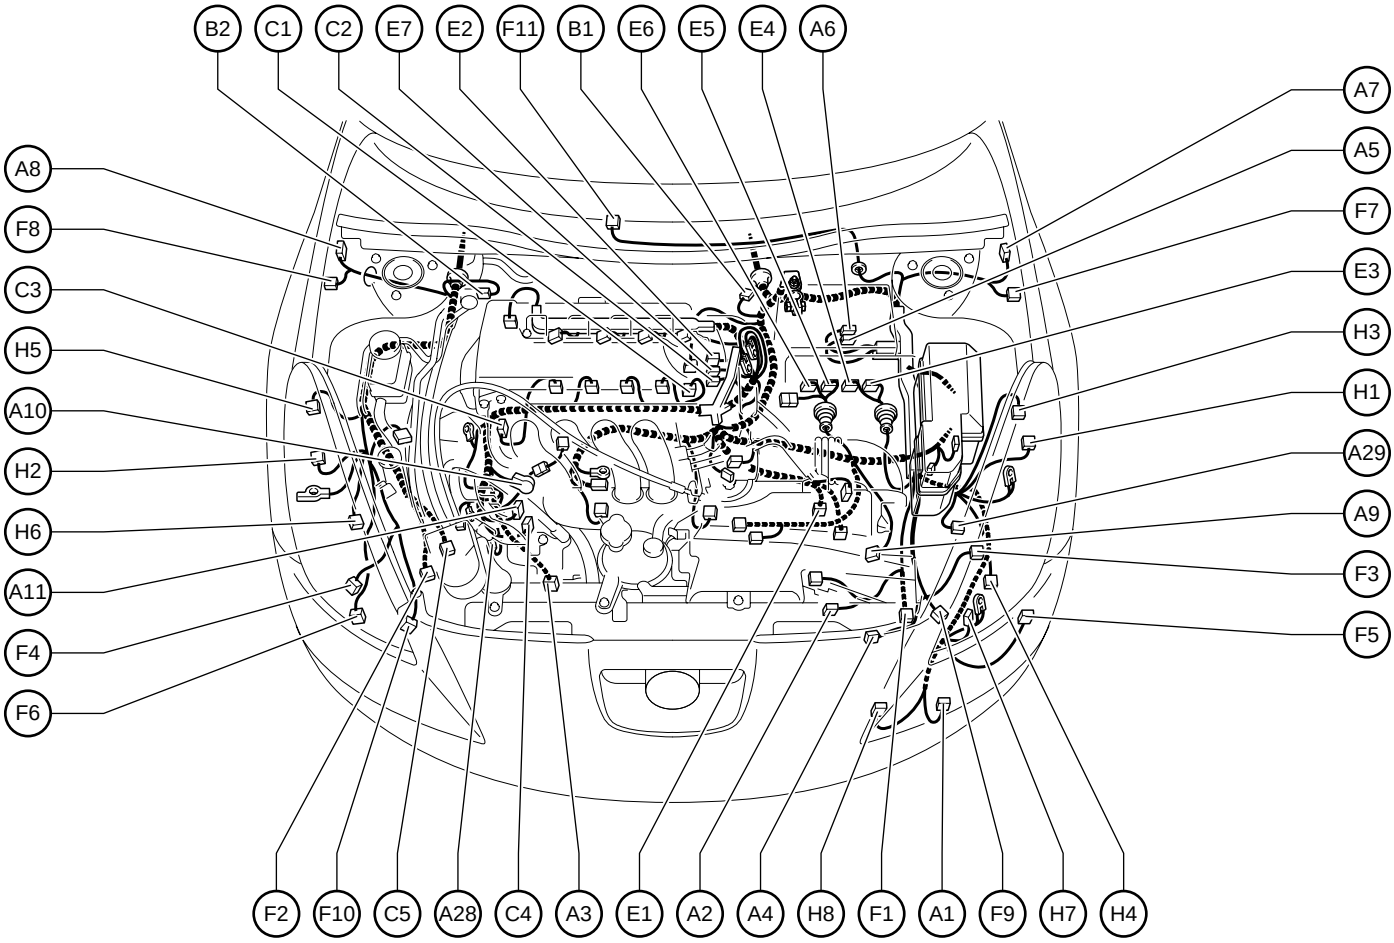

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Magnetic Clutch and Lock Sensor
A 4 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
A 5 ABS Actuator
A 6 ABS Actuator
A 7 ABS Speed Sensor Front LH
A 8 ABS Speed Sensor Front RH
A 9 Air Flow Meter
A 10 Alternator
A 11 Alternator
A 28 Air Pump Motor
A 29 Air Pump Relay

B 1 Back–Up Light SW
B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 2 Camshaft Timing Oil Control Valve (VVL)
C 3 Camshaft Timing Oil Control Valve (VVT)
C 4 Crankshaft Position Sensor
C 5 Cruise Control Actuator

E 1 ECT Solenoid
E 2 EFI Water Temp. Sensor
E 3 Engine ECU (M/T) or Engine and ECT ECU (A/T)
E 4 Engine ECU (M/T) or Engine and ECT ECU (A/T)
E 5 Engine ECU (M/T) or Engine and ECT ECU (A/T)
E 6 Engine ECU (M/T) or Engine and ECT ECU (A/T)
E 7 Oil Pressure SW (VVTL)

F 1 Front Airbag Sensor LH
F 2 Front Airbag Sensor RH
F 3 Front Clearance Light LH
F 4 Front Clearance Light RH
F 5 Front Fog Light LH
F 6 Front Fog Light RH
F 7 Front Side Turn Signal Light LH
F 8 Front Side Turn Signal Light RH
F 9 Front Turn Signal Light LH
F 10 Front Turn Signal Light RH
F 11 Front Wiper Motor

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 3 Headlight LH (High)
H 4 Headlight LH (Low)
H 5 Headlight RH (High)
H 6 Headlight RH (Low)
H 7 Horn (High)
H 8 Horn (Low)