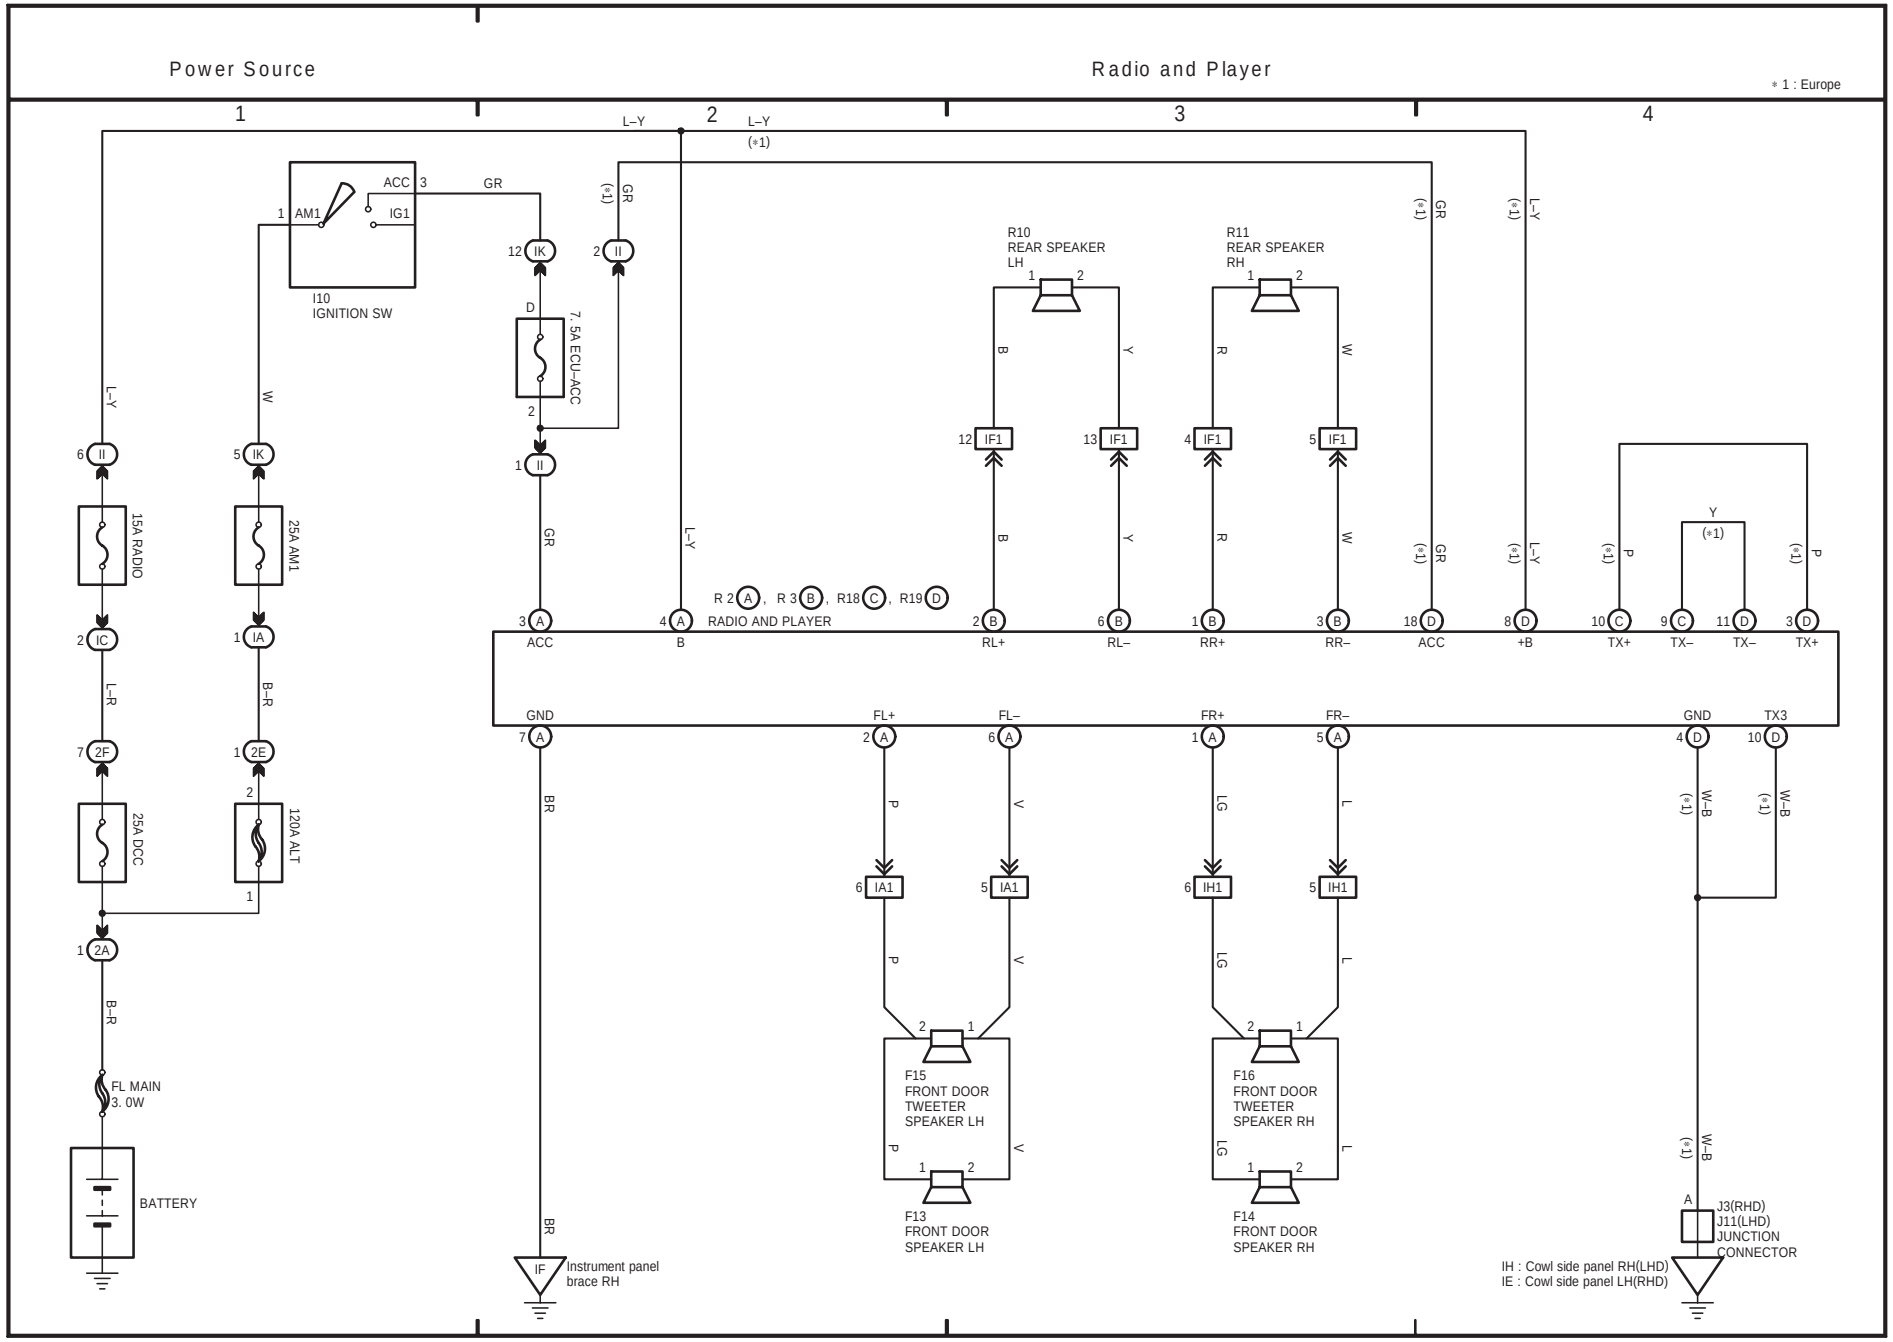

Power Source
Radio and Player
* 1 : Europe
1
2
3
4
L–Y
(*1)
ACC
IG1
AM1
GR
I10
IGNITION SW
7.5A ECU–ACC
R10
REAR SPEAKER
LH
R11
REAR SPEAKER
RH
15A RADIO
25A AM1
25A DCC
120A ALT
FL MAIN
3.0W
BATTERY
R 2 A , R 3 B , R18 C , R19 D
RADIO AND PLAYER
ACC
B
RL+
RL–
RR+
RR–
ACC
+B
TX+
TX–
TX–
TX+
GND
FL+
FL–
FR+
FR–
GND
TX3
F15
FRONT DOOR
TWEETER
SPEAKER LH
F16
FRONT DOOR
TWEETER
SPEAKER RH
F13
FRONT DOOR
SPEAKER LH
F14
FRONT DOOR
SPEAKER RH
Instrument panel
brace RH
J3(RHD)
J11(LHD)
JUNCTION
CONNECTOR
IH : Cowl side panel RH(LHD)
IE : Cowl side panel LH(RHD)