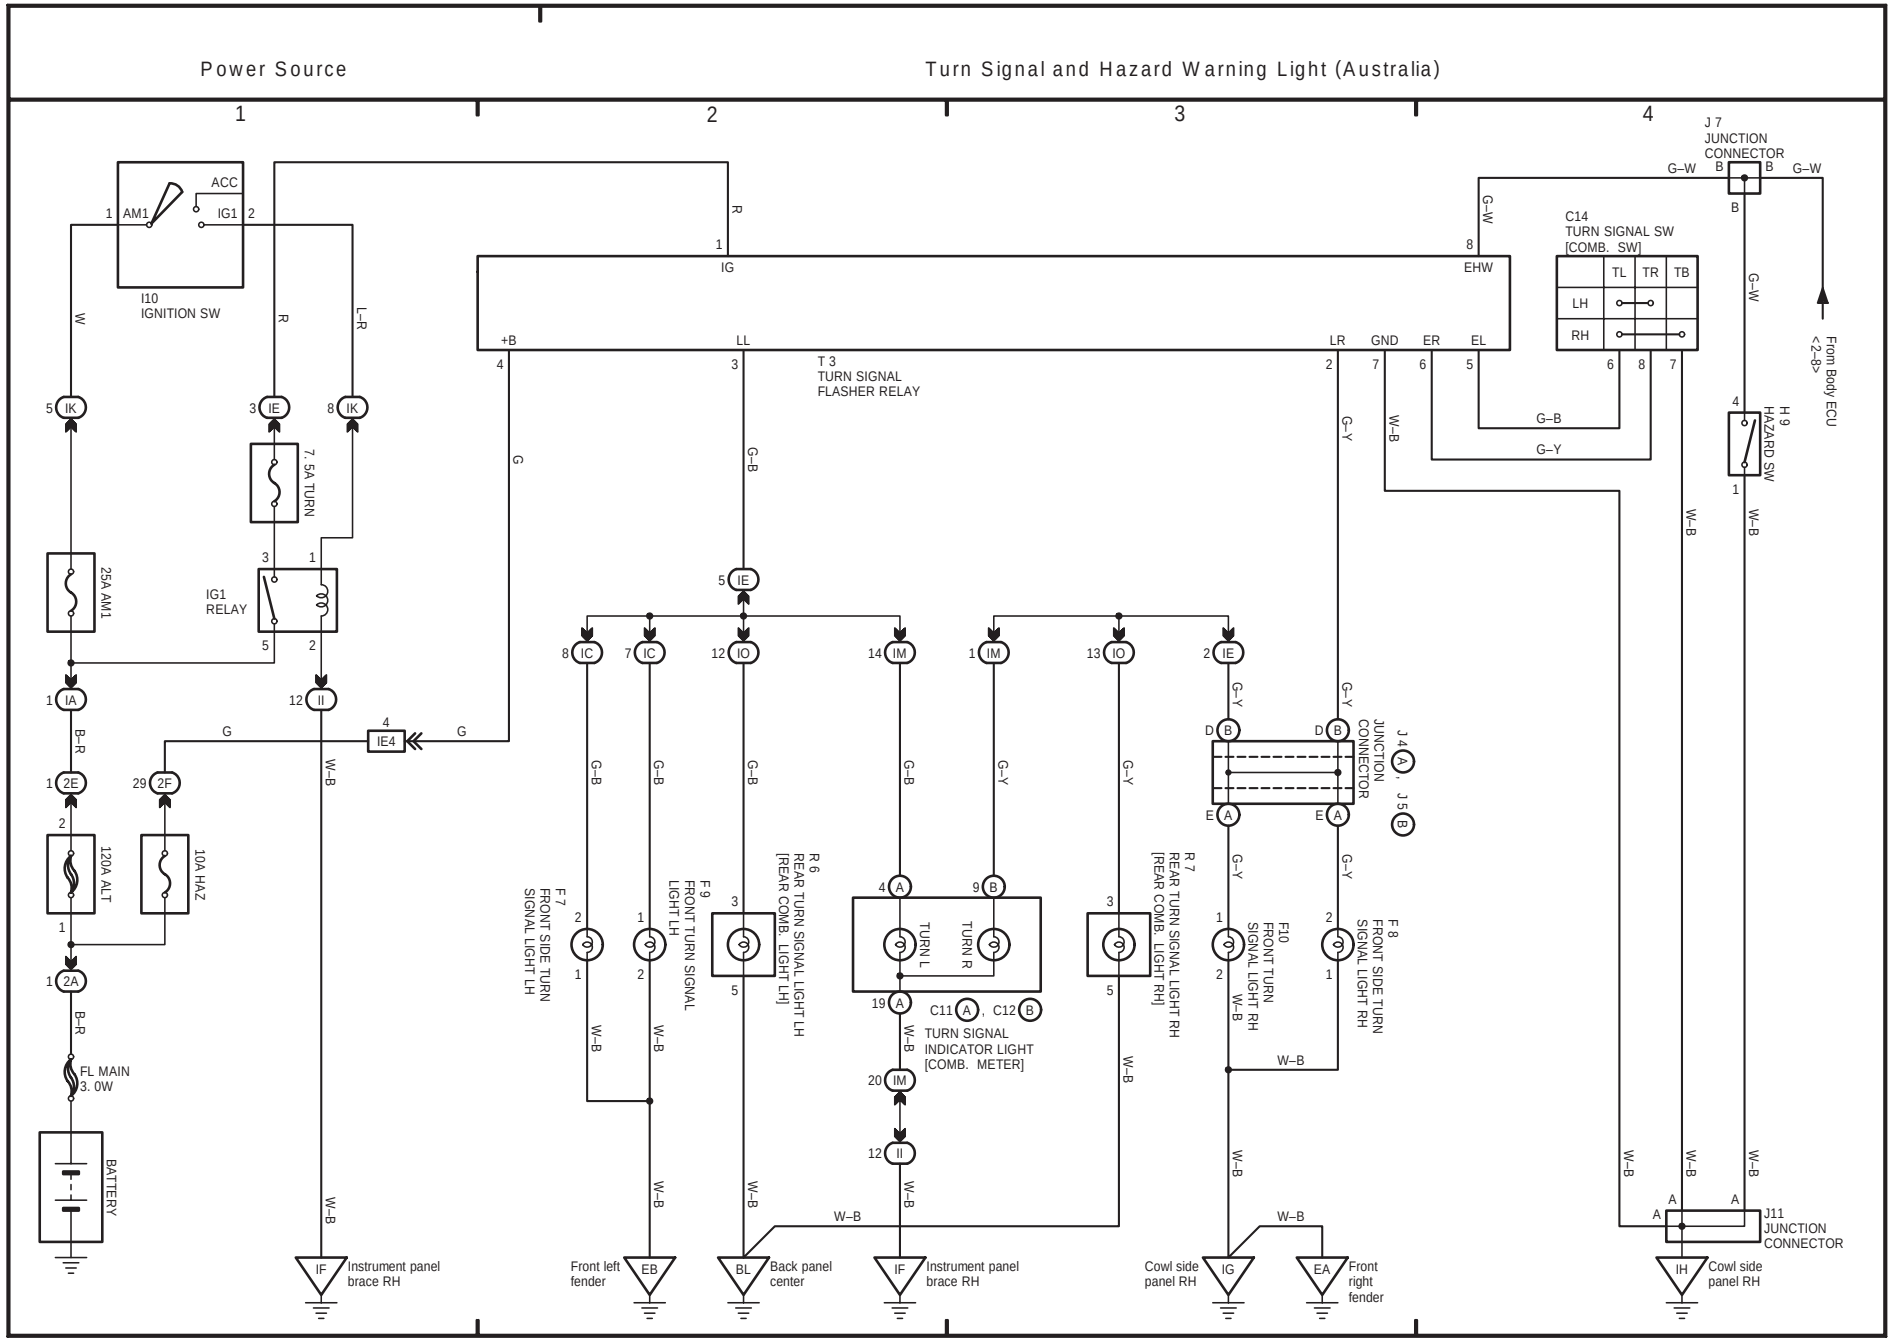

Power Source
Turn Signal and Hazard Warning Light (Australia)
1
2
3
4
ACC
AM1
IG1
I10
IGNITION SW
IG
EHW
+B
LL
LR
GND
ER
EL
T 3
TURN SIGNAL
FLASHER RELAY
C14
TURN SIGNAL SW
[COMB. SW]
TL
TR
TB
LH
RH
J 7
JUNCTION
CONNECTOR
From Body ECU
<2-8>
H 9
HAZARD SW
7. 5A TURN
25A AM1
IG1
RELAY
120A ALT
10A HAZ
FL MAIN
3. 0W
BATTERY
IE4
F 7
FRONT SIDE TURN
SIGNAL LIGHT LH
F 9
FRONT TURN SIGNAL
LIGHT LH
R 6
REAR TURN SIGNAL LIGHT LH
[REAR COMB. LIGHT LH]
TURN L
TURN R
C11 A , C12 B
TURN SIGNAL
INDICATOR LIGHT
[COMB. METER]
R 7
REAR TURN SIGNAL LIGHT RH
[REAR COMB. LIGHT RH]
F10
FRONT TURN
SIGNAL LIGHT RH
F 8
FRONT SIDE TURN
SIGNAL LIGHT RH
J 4 A , J 5 B
JUNCTION
CONNECTOR
J11
JUNCTION
CONNECTOR
IF
Instrument panel
brace RH
Front left
fender
EB
BL
Back panel
center
IF
Instrument panel
brace RH
Cowl side
panel RH
IG
EA
Front
right
fender
IH
Cowl side
panel RH