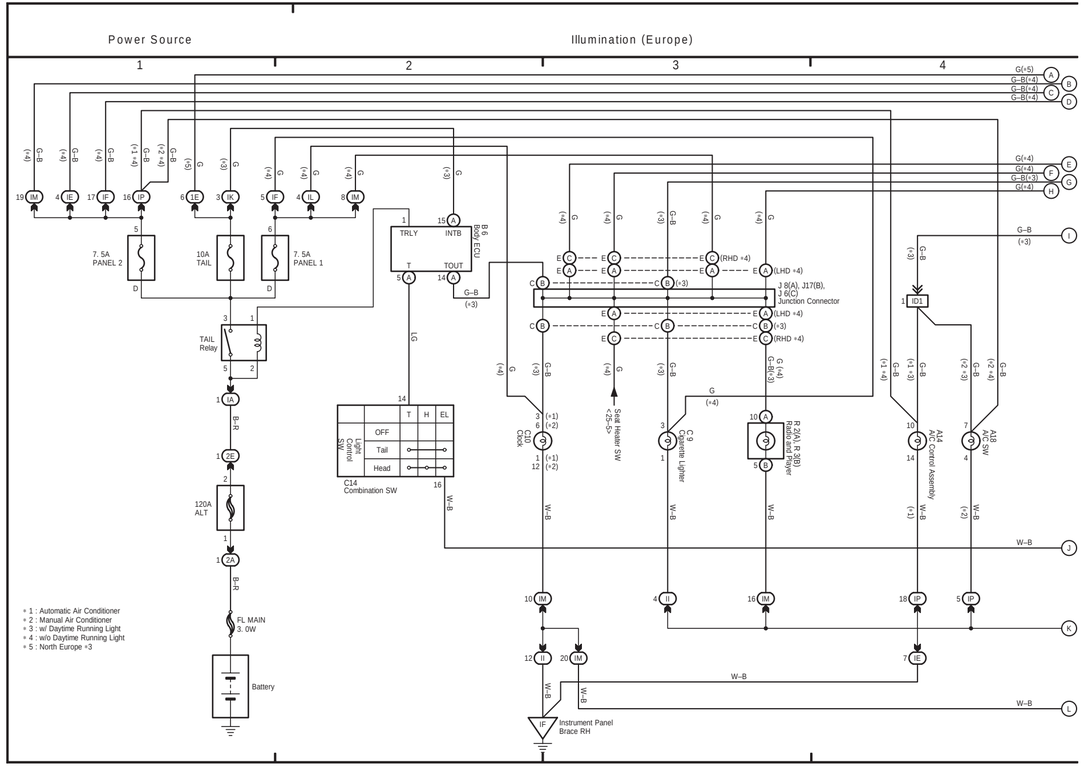
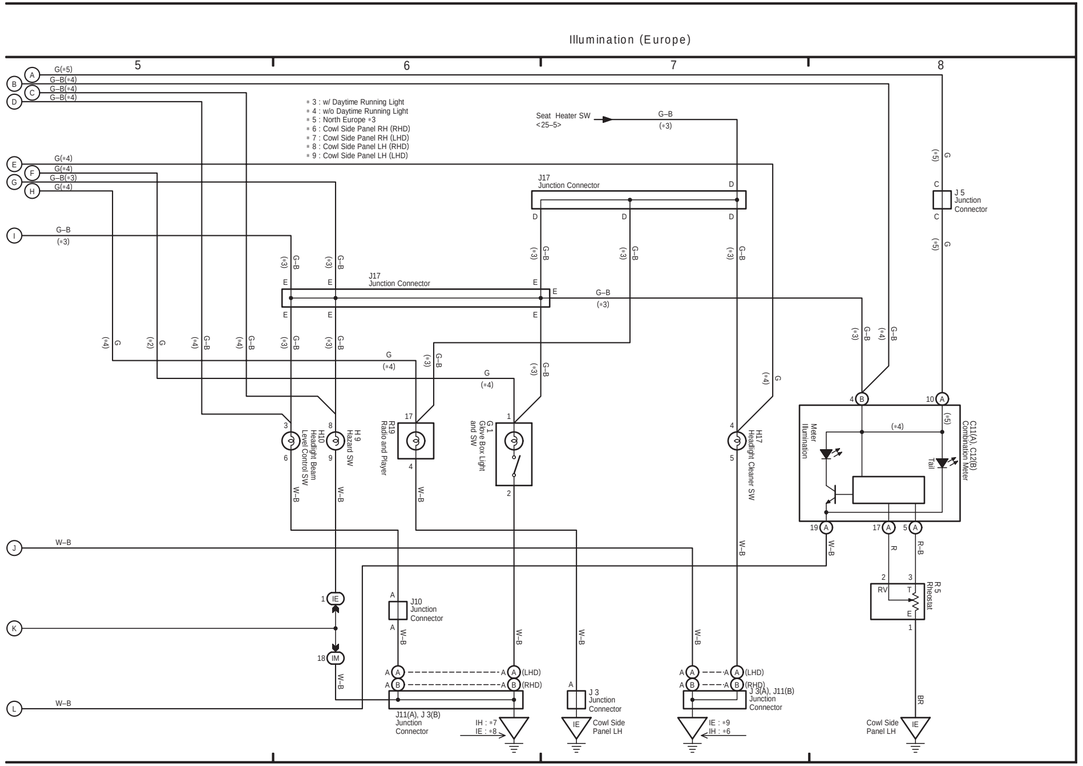

Power Source
Illumination (Europe)
1
2
3
4
7.5A PANEL 2
10A TAIL
7.5A PANEL 1
TAIL Relay
120A ALT
FL MAIN 3.0W
Battery
Body ECU
TRLY
INTB
TOUT
Light Control SW
OFF
Tail
Head
T
H
EL
C14 Combination SW
J 8(A), J17(B), J 6(C) Junction Connector
(RHD ×4)
(LHD ×4)
(×3)
Seat Heater SW <25-5>
C 9 Cigarette Lighter
R 29(A) R 28(B) Radio and Player
A14 A/C Control Assembly
A18 A/C SW
CLOCK
ID1
IE
IF
Instrument Panel Brace RH
× 1 : Automatic Air Conditioner
× 2 : Manual Air Conditioner
× 3 : w/ Daytime Running Light
× 4 : w/o Daytime Running Light
× 5 : North Europe ×3


Illumination (Europe)
5
6
7
8
× 3 : w/ Daytime Running Light
× 4 : w/o Daytime Running Light
× 5 : North Europe ×3
× 6 : Cowl Side Panel RH (RHD)
× 7 : Cowl Side Panel RH (LHD)
× 8 : Cowl Side Panel LH (RHD)
× 9 : Cowl Side Panel LH (LHD)
Seat Heater SW <25-5>
J17 Junction Connector
J 5 Junction Connector
Headlight Beam Level Control SW
H 9 Hazard SW
R28 Radio and Player
Glove Box Light and SW
H17 Headlight Cleaner SW
Main Illumination
C11(A), C12(B) Combination Meter
J10 Junction Connector
J11(A), J 3(B) Junction Connector
J 3 Junction Connector
J 3(A), J11(B) Junction Connector
Cowl Side Panel LH
IH : ×7
IE : ×8
IE : ×9
IH : ×6