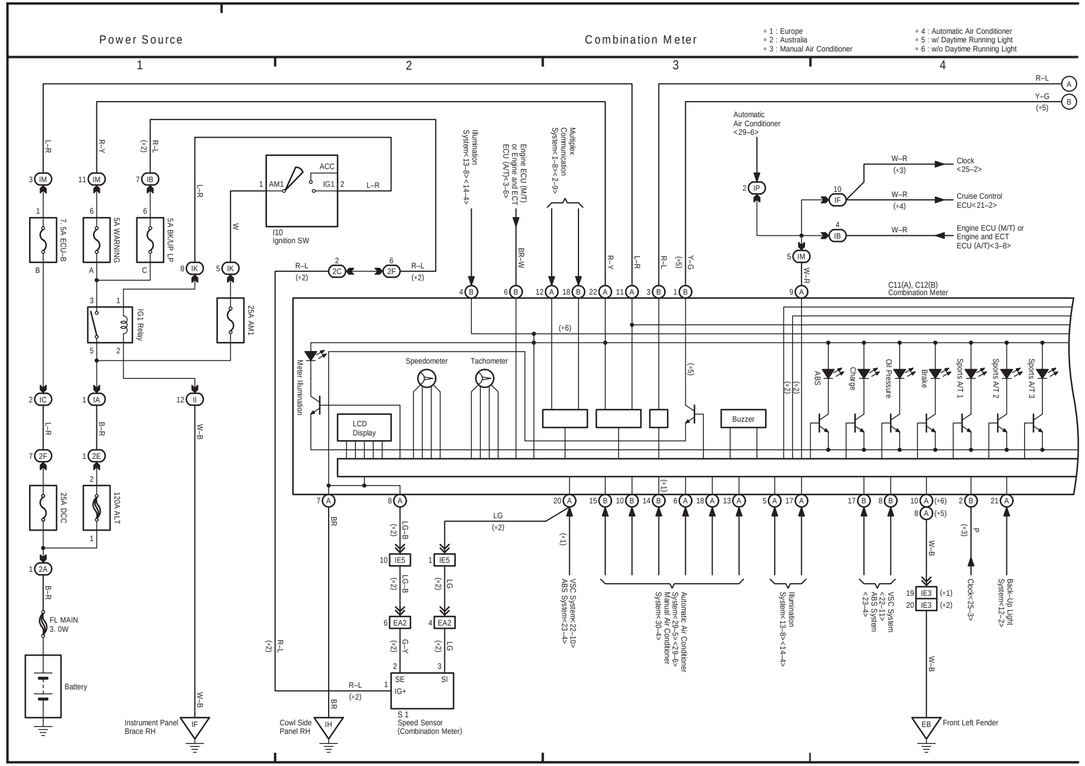
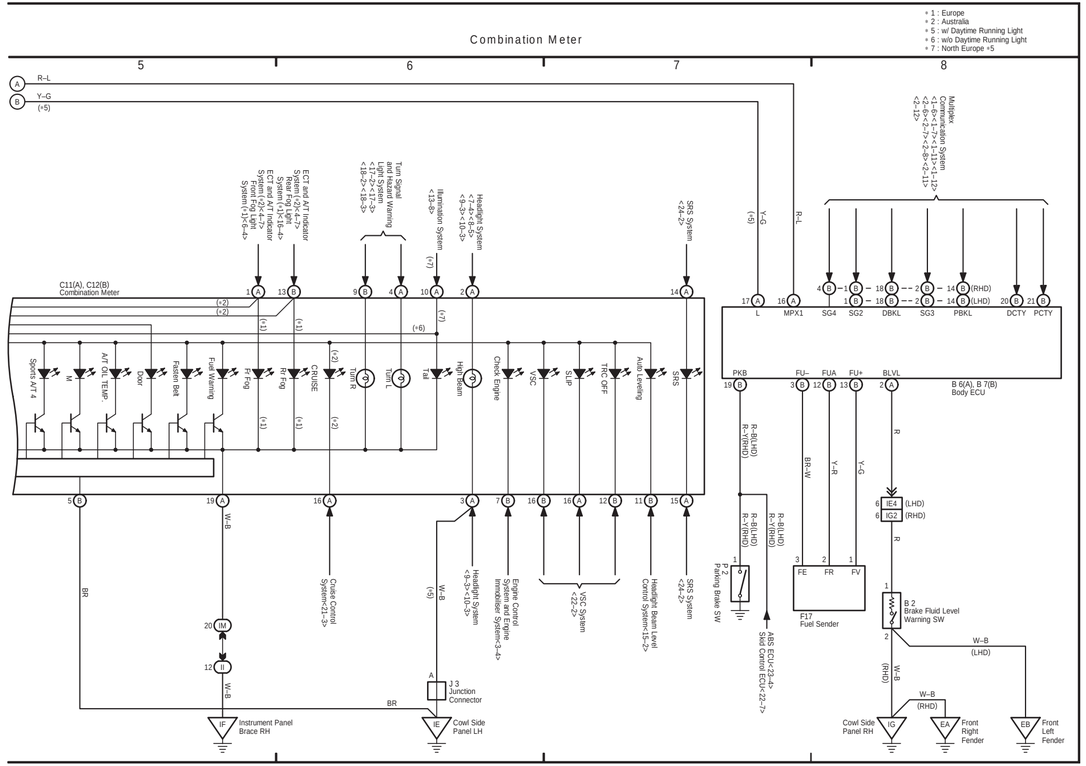

Power Source
Combination Meter
* 1 : Europe
* 2 : Australia
* 3 : Manual Air Conditioner
* 4 : Automatic Air Conditioner
* 5 : w/ Daytime Running Light
* 6 : w/o Daytime Running Light
1
2
3
4
R–L
Y–G
(+5)
Automatic Air Conditioner <2.2l–6>
Clock <25–2>
Cruise Control ECU<21–2>
Engine ECU (M/T) or Engine and ECT ECU (A/T)<3–8>
C11(A), C12(B) Combination Meter
Meter Illumination
Speedometer
Tachometer
LCD Display
Buzzer
ABS
Charge
Oil Pressure
Brake
Sports A/T 1
Sports A/T 2
Sports A/T 3
I10 Ignition SW
ACC
IG1
AM1
I11 IG1 Relay
I12 ECU-IG Relay
I13 Starter Relay
I14 Fusible Link Block
7.5A ECU–B
5A WARNING
5A BK/UP LP
25A DCC
120A ALT
25A AM1
FL MAIN 3.0W
Battery
Instrument Panel Brace RH
Cowl Side Panel RH
S 1 Speed Sensor (Combination Meter)
Front Left Fender
Illumination System<13–3>,<14–4>
Multiplex Communication System<1–8>,<2–2>
Engine ECU (M/T) or Engine and ECT ECU (A/T)<3–8>
VSC System<22–1>, ABS System<23–4>
Automatic Air Conditioner System<2.2l–5>,<2.2l–6>, Manual Air Conditioner System<2.2l–4>
VSC System <22–2>, ABS System <23–4>
Illumination System<13–3>,<14–4>
Back–Up Light System<13–2>
Clock<25–3>
Cruise Control System<21–3>
Headlight System <3–3>,<10–3>
Engine Control System and Engine Immobilizer System<3–4>
VSC System <22–2>
Headlight Beam Level Control System<15–2>
SRS System <24–2>
J 3 Junction Connector
Cowl Side Panel LH


Combination Meter
* 1 : Europe
* 2 : Australia
* 5 : w/ Daytime Running Light
* 6 : w/o Daytime Running Light
* 7 : North Europe +5
5
6
7
8
R–L
Y–G
(+5)
C11(A), C12(B) Combination Meter
ECT and A/T Indicator System <2.2l–6>, Electronic Control System <1.5l–6>, Front Fog Light System <1.5l–6>
Turn Signal and Hazard Warning Light System <18–2>,<18–3>
Illumination System <13–3>
Headlight System <3–3>,<10–3>
SRS System <24–2>
Multiplex Communication System <1–8>,<1–7>,<1–12>,<1–16>,<2–8>,<2–7>,<2–8>,<2–11>,<2–12>
Sports A/T 4
M
A/T TAIL TAIL
Door
Seat Belt
Fuel Warning
F Fog
R Fog
DEF
Turn R
Turn L
High Beam
Tail
Check Engine
VSC
ALT
TRC OFF
Auto Leveling
SRS
L
MPX1
SG4
SG2
DBKL
SG3
PBKL
DCTY
PCTY
PKB
FU–
FUA
FU+
BLVL
B 6(A), B 7(B) Body ECU
R–B(LHD) R–Y(RHD)
R–B(LHD) R–Y(RHD)
BR–W
Y–R
Y–G
R
IE4 (LHD)
IG2 (RHD)
B 2 Brake Fluid Level Warning SW
W–B (LHD)
W–B (RHD)
P Parking Brake SW
F17 Fuel Sender
FE
FR
FV
ABS ECU<23–4> Skid Control ECU<22–7>
Instrument Panel Brace RH
J 3 Junction Connector
Cowl Side Panel LH
Cowl Side Panel RH
Front Right Fender
Front Left Fender