
AC2IK–01

# REMOVAL

**1. REMOVE GLOVE COMPARTMENT PARTS**
**(See page BO–80)**

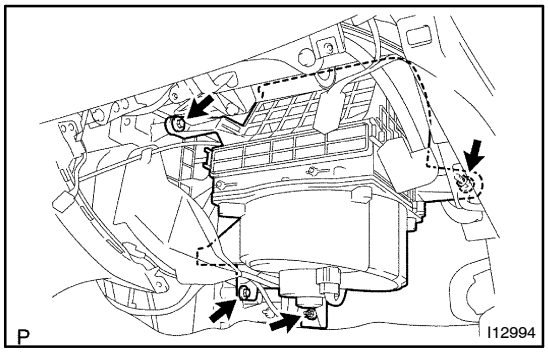


**2. REMOVE BLOWER UNIT**

(a) Manual A/C:
Disconnect the air inlet control cable.
(b) Disconnect the connector.
(c) Remove wire harness clamp.
(d) Remove the 2 screws, 2 nuts and the blower unit.