

AC2IL–01

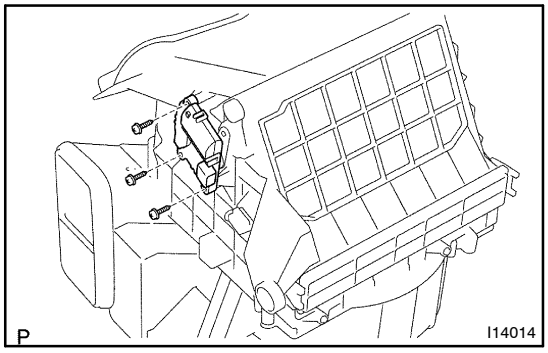

DISASSEMBLY

1. Auto A/C only:
REMOVE AIR INLET SERVOMOTOR

Remove the 3 screws and servomotor.

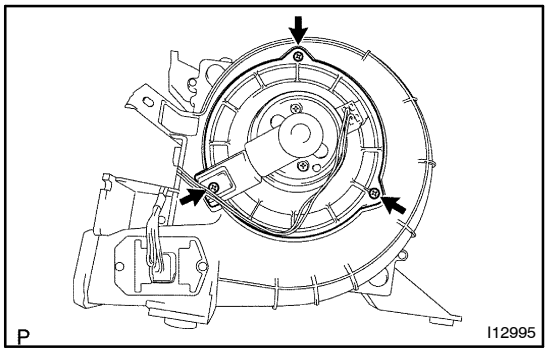

2. REMOVE BLOWER MOTOR

Remove the 3 screws and blower motor.

3. Manual A/C only:
REMOVE BLOWER RESISTOR

Remove the 2 screws and blower resistor.

4. Auto A/C only:
REMOVE BLOWER MOTOR LINEAR CONTROLLER

Remove the 2 screws and blower motor linear controller.