
AC2IP–01

REMOVAL

1. RUN ENGINE AT IDLE SPEED WITH A/C ON FOR APPROX. 10 MINUTES
2. STOP ENGINE
3. DISCONNECT NEGATIVE (–) TERMINAL CABLE FROM BATTERY
4. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM
5. REMOVE DRIVE BELT (See page AC–17)
6. DISCONNECT CRUISE CONTROL ACTUATOR CONNECTOR
7. REMOVE 3 CRUISE CONTROL ACTUATOR SET BOLTS

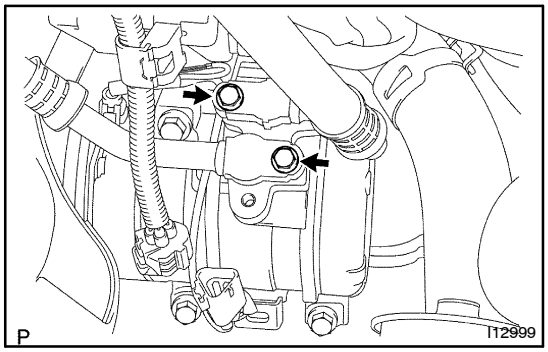


8. DISCONNECT DISCHARGE AND SUCTION HOSES

Remove the 2 bolts and disconnect the both hoses.

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

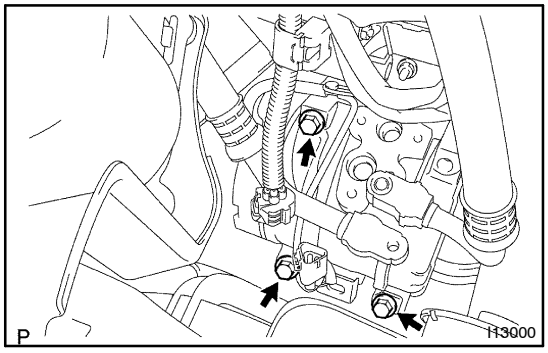

9. REMOVE COMPRESSOR

(a) Disconnect the connector.
(b) Disconnect the wire harness clamp.
(c) Remove the 3 bolts and compressor.