

AC2IQ–01

DISASSEMBLY

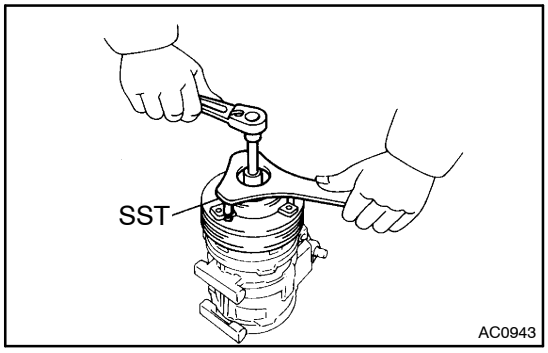


1. REMOVE PRESSURE PLATE


(a) Using SST and a socket wrench, remove the shaft bolt.
SST 07112–76060
Torque: 13.2 N·m (135 kgf·cm, 9 ft·lbf)

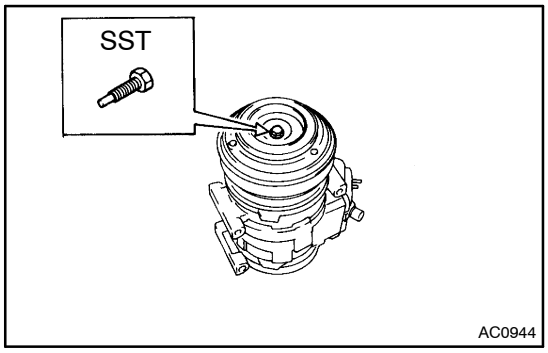


(b) Install SST on the pressure plate.
SST 07112–66040

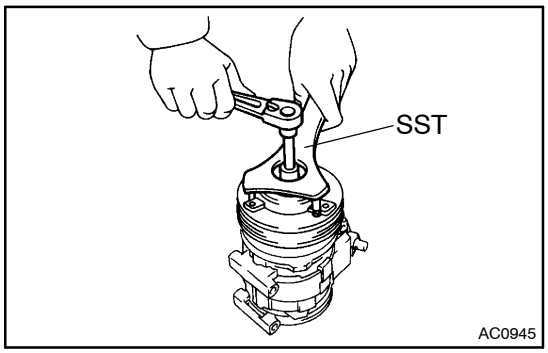

(c) Using SST and socket wrench, remove the pressure plate.
SST 07112–66040, 07112–76060

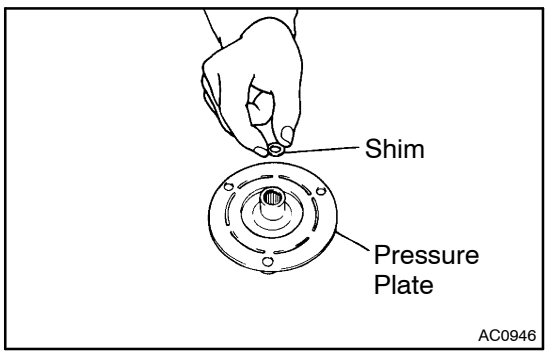


(d) Remove the shims from the pressure plate.

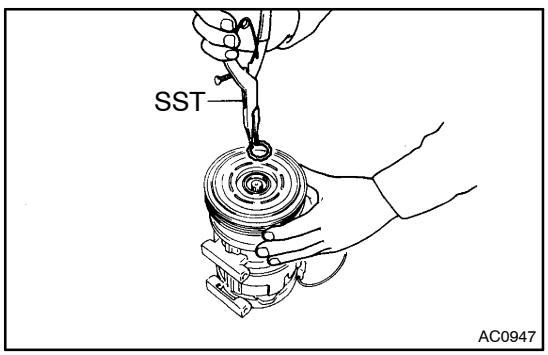

2. REMOVE ROTOR


(a) Using SST, remove the snap ring.
SST 07114–84020

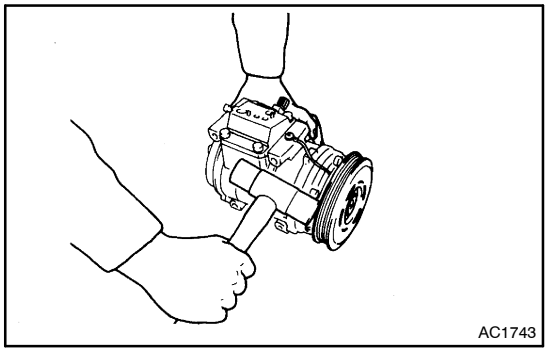

(b) Using a plastic hammer, tap the rotor off the shaft.


NOTICE:

Be careful not to damage the pulley when tapping on the rotor.

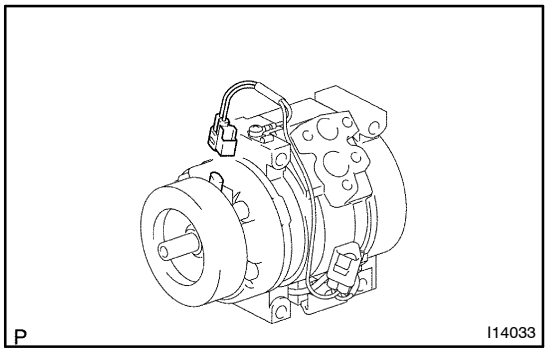


3. REMOVE STATOR

(a) Disconnect the connector from the stator.

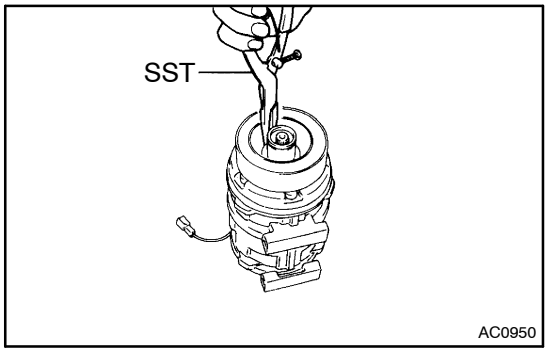

(b) Using SST, remove the snap ring.
SST 07114–84020

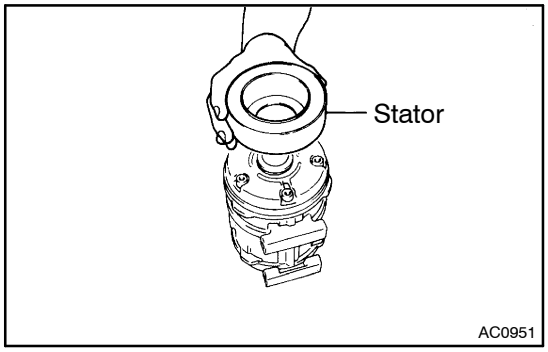

(c) Remove the stator.