
BLOWER MOTOR

AC2IY–01

INSPECTION


1. **REMOVE GLOVE COMPARTMENT PARTS**
(See page BO–80)

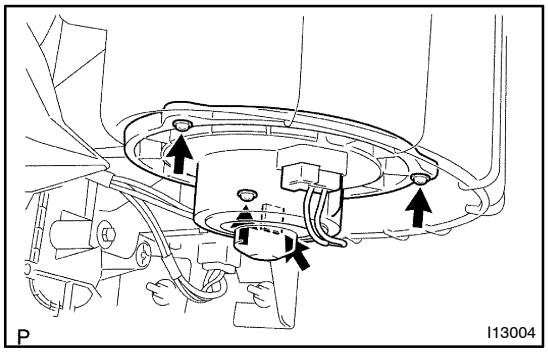

2. **REMOVE BLOWER MOTOR**

(a) Remove the wire harness clamp and disconnect the connector.

(b) Remove the 3 screws and motor.

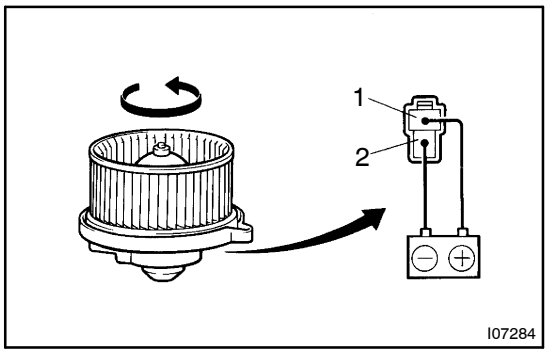

3. **INSPECT BLOWER MOTOR OPERATION**

Connect the positive (+) lead from the battery to terminal 1 and the negative (–) lead to terminal 2, then check that the motor operations smoothly.

If operation is not as specified, replace the blower motor.

4. **INSTALL BLOWER MOTOR**

(a) Install the motor and 3 screws.

(b) Connect the connector and wire harness clamp.

5. **INSTALL GLOVE COMPARTMENT PARTS**
(See page BO–86)