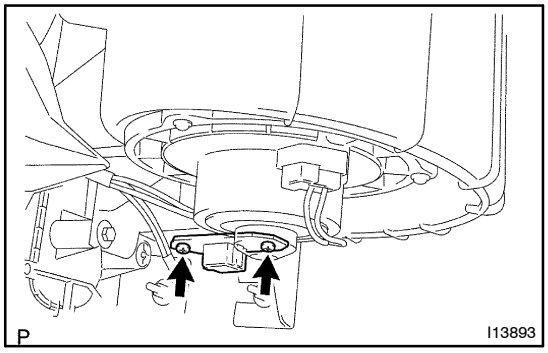



BLOWER RESISTOR

AC2IZ–01

INSPECTION

1. REMOVE BLOWER RESISTOR

(a) Disconnect the connector.
(b) Remove the 2 screws and the blower resistor.

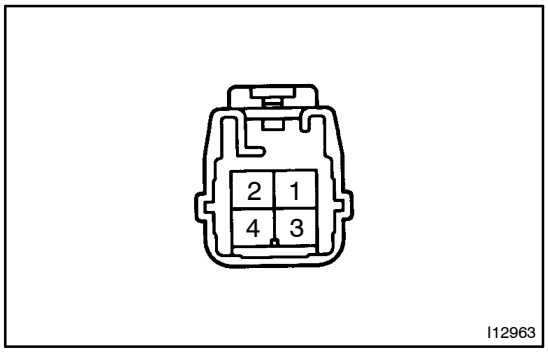

2. INSPECT BLOWER RESISTOR CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2 – 3 – 4	Continuity

If continuity is not as specified, replace the blower resistor.

3. INSTALL BLOWER RESISTOR

(a) Install the blower resistor and 2 screws.
(b) Connect the connector.