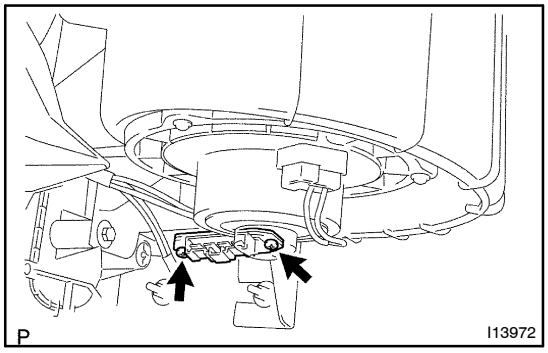


BLOWER MOTOR LINEAR CONTROLLER (Auto A/C)

AC2J0–01

INSPECTION

1. REMOVE BLOWER MOTOR LINEAR CONTROLLER

(a) Disconnect the connector.

(b) Remove the 2 screws and the controller.

2. INSPECT BLOWER MOTOR LINEAR CONTROLLER CONTINUITY (See page DI–478)

3. INSTALL BLOWER MOTOR LINER CONTROLLER

(a) Install the controller and 2 screws.

(b) Connect the connector.