
AIR MIX SERVOMOTOR (Auto A/C)

AC2JC–01

INSPECTION

1. REMOVE INSTRUMENT PANEL (See page BO–80)

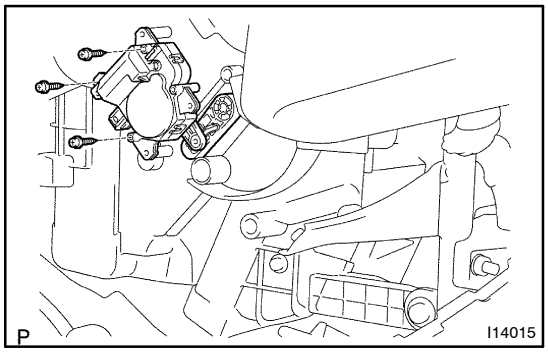

2. REMOVE AIR MIX SERVOMOTOR
(a) Disconnect the connector.
(b) Remove the 3 screws and servomotor.
3. INSPECT AIR MIX CONTROL SERVOMOTOR CIRCUIT (See page DI–458)
4. INSPECT AIR MIX DAMPER POSITION SENSOR CIRCUIT (See page DI–452)
5. INSTALL AIR MIX SERVOMOTOR
(a) Install the servomotor with the 3 screws.
(b) Connect the connector.
6. INSTALL INSTRUMENT PANEL (See page BO–86)