
AIR OUTLET SERVOMOTOR (Auto A/C)

INSPECTION

AC2JD-01

1. REMOVE INSTRUMENT PANEL (See page BO–80)

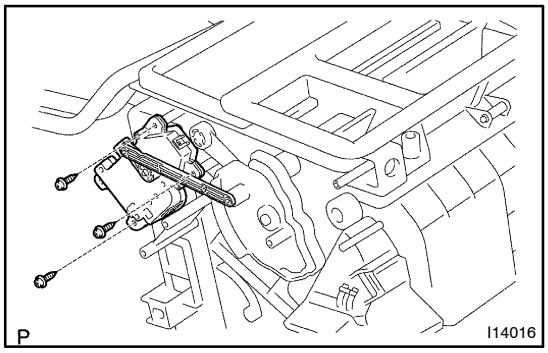

2. REMOVE AIR OUTLET SERVOMOTOR
(a) Disconnect the connector.
(b) remove the 3 screws and servomotor.
3. INSPECT AIR OUTLET DAMPER POSITION SENSOR CIRCUIT (See page DI–455)
4. INSPECT AIR OUTLET CONTROL SERVOMOTOR CIRCUIT (See page DI–461)
5. INSPECT AIR OUTLET SERVOMOTOR
(a) Install the servomotor with the 3 screws.
(b) Connect the connector.
6. INSTALL INSTRUMENT PANEL (See page BO–86)