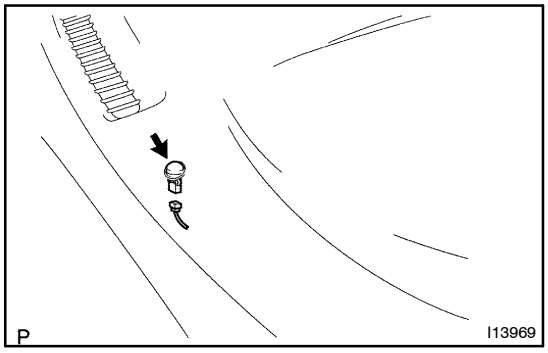


SOLAR SENSOR (Auto A/C)

AC2JE–01

INSPECTION

1. REMOVE SOLAR SENSOR

Using a screwdriver, pull out the sensor, the disconnect the connector.

HINT:

Tape the screwdriver tip before use.

2. INSPECT SOLAR SENSOR CIRCUIT

(See page DI–446)

3. INSTALL SOLAR SENSOR

(a) Connect the connector.

(b) Insert the sensor to the instrument panel.