
ROOM TEMPERATURE SENSOR (Auto A/C)

AC2JF-01

INSPECTION

1. **REMOVE LOWER FINISH PANEL NO. 1**
2. **REMOVE FINISH PANEL**
3. **REMOVE FINISH PANEL END**

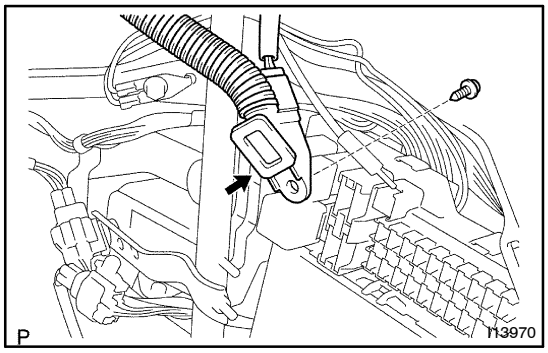

4. **REMOVE ROOM TEMPERATURE SENSOR**
   (a) Disconnect the connector and aspirator hose.
   (b) Remove a screw and the sensor.
5. **INSPECT ROOM TEMPERATURE SENSOR CIRCUIT (See page DI–434)**
6. **INSTALL ROOM TEMPERATURE SENSOR**
   (a) Install the sensor and a screw.
   (b) Connect the connector and aspirator hose.
7. **INSTALL FINISH PANEL END**
8. **INSTALL FINISH PANEL**
9. **INSTALL LOWER FINISH PANEL NO. 1**