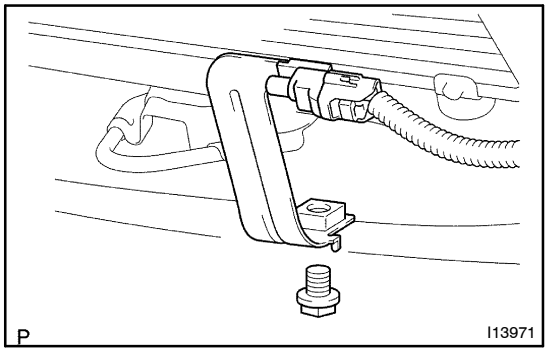


AMBIENT TEMPERATURE SENSOR (Auto A/C)

AC2JG–01

INSPECTION

1. REMOVE AMBIENT TEMPERATURE SENSOR

(a) Remove the bolt and disconnect the connector.

(b) Using a clip remover, pull out the sensor from front bumper reinforcement.

2. INSPECT AMBIENT TEMPERATURE SENSOR CIRCUIT (See page DI–437)

3. INSTALL AMBIENT TEMPERATURE SENSOR

(a) Install the sensor and bolt.

(b) Connect the connector.