
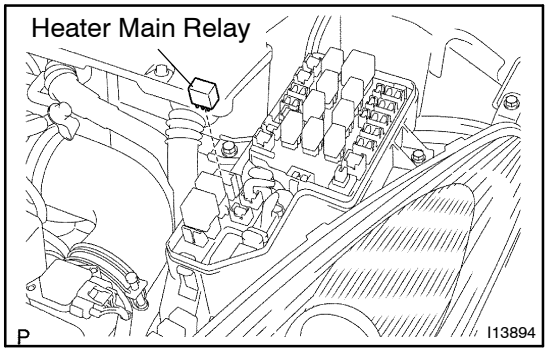


HEATER MAIN RELAY

AC2J5–01

INSPECTION

1. REMOVE HEATER MAIN RELAY FROM ENGINE ROOM RELAY BLOCK NO. 1

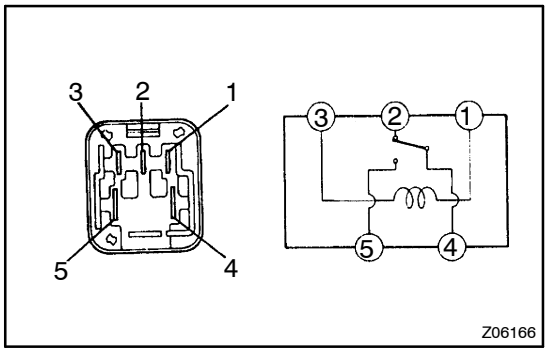

2. INSPECT HEATER MAIN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 3 2 – 4	Continuity
Apply B+ between terminals 1 and 3.	4 – 5	Continuity

If continuity is not as specified, replace the relay.