
AC2JQ–01


DISASSEMBLY

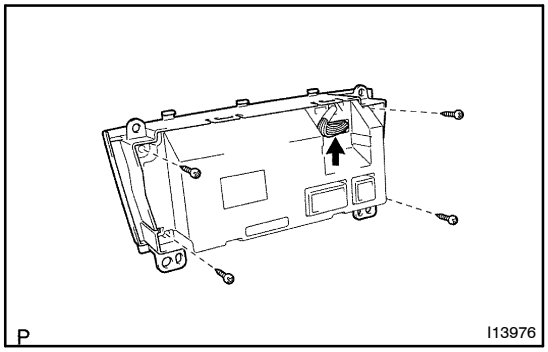

1. REMOVE A/C CONTROL HOUSING


(a) Disconnect the connector.

(b) Remove the 4 screws and A/C control housing.

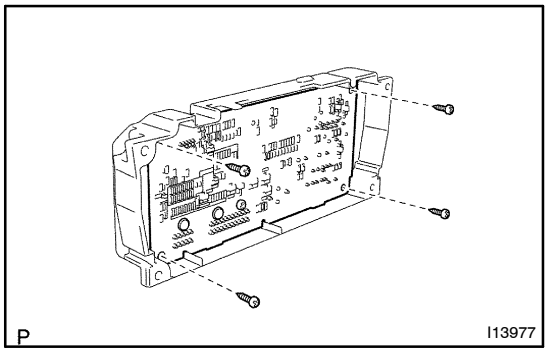

2. REMOVE A/C AMPLIFIER

Remove the 4 screws and A/C amplifier.

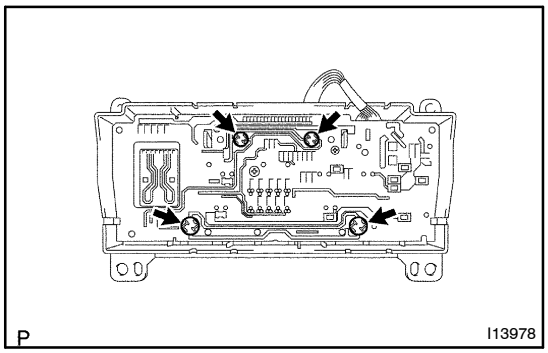

3. REMOVE BULB

Using a screwdriver, turn the bulb to the left and pull out the bulb.