
AC2JM–01


REMOVAL

1. REMOVE CENTER CLUSTER FINISH PANEL
(See page BO–80)

2. DISCONNECT HEATER CONTROL CABLES


NOTICE:
When the air mix damper control cables is disconnected, should not bend the cable.

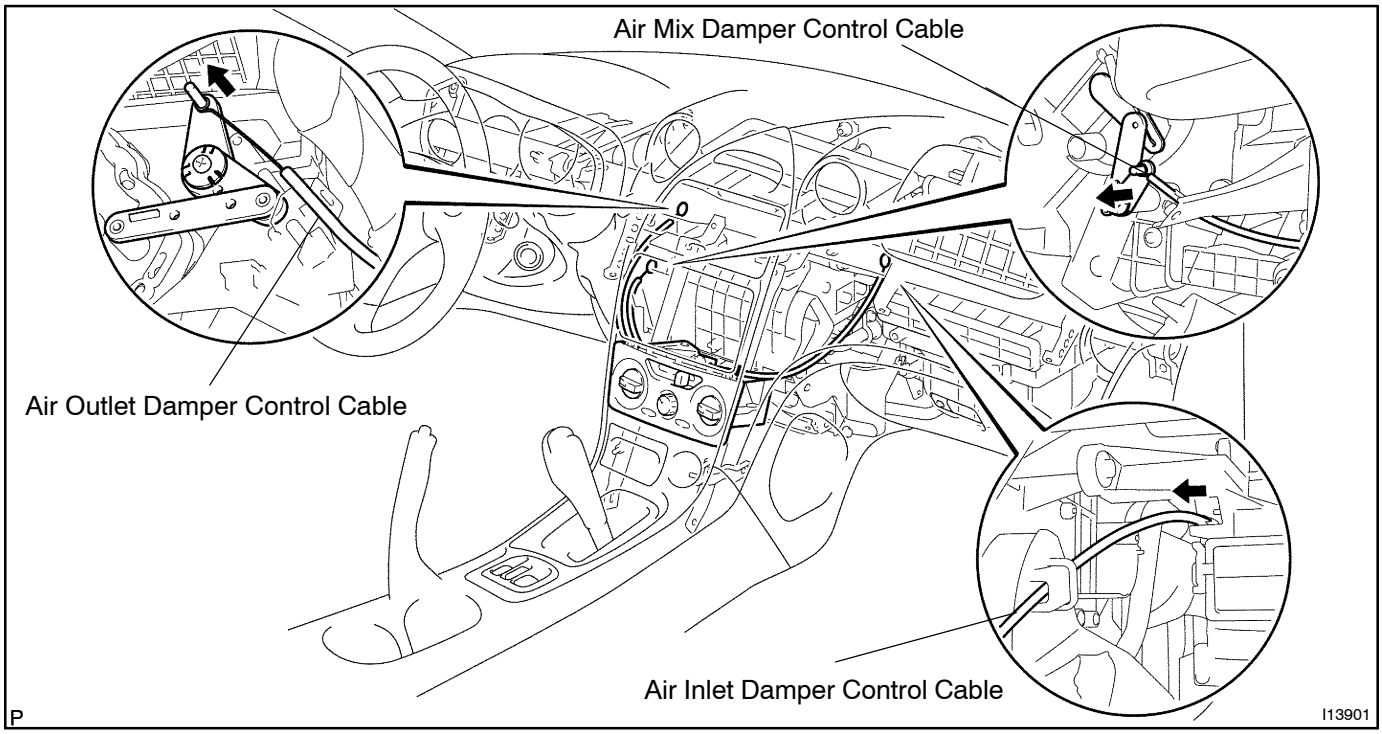

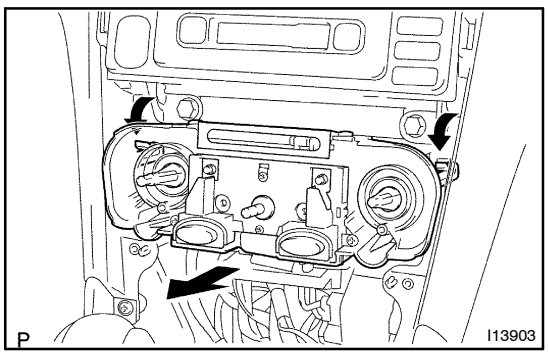

3. REMOVE HEATER CONTROL ASSEMBLY

Release the 2 claws and pull out the A/C control assembly, then disconnect the connector.

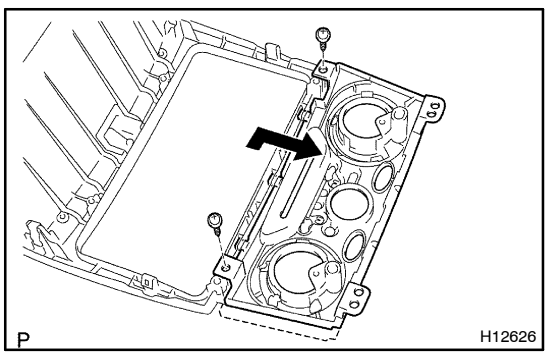

4. REMOVE HEATER CONTROL PANEL

(a) Remove the 2 screws.
(b) Slide and remove the A/C control assembly.