
AC2JO–01

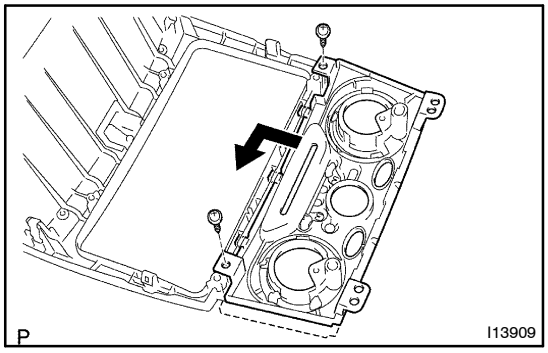

INSTALLATION


1. INSTALL A/C CONTROL PANEL


Install the A/C control panel and 2 screws.

2. INSTALL A/C CONTROL ASSEMBLY

(a) Install the A/C control assembly temporarily.

(b) Pass through the A/C control cables as shown in the illustration.

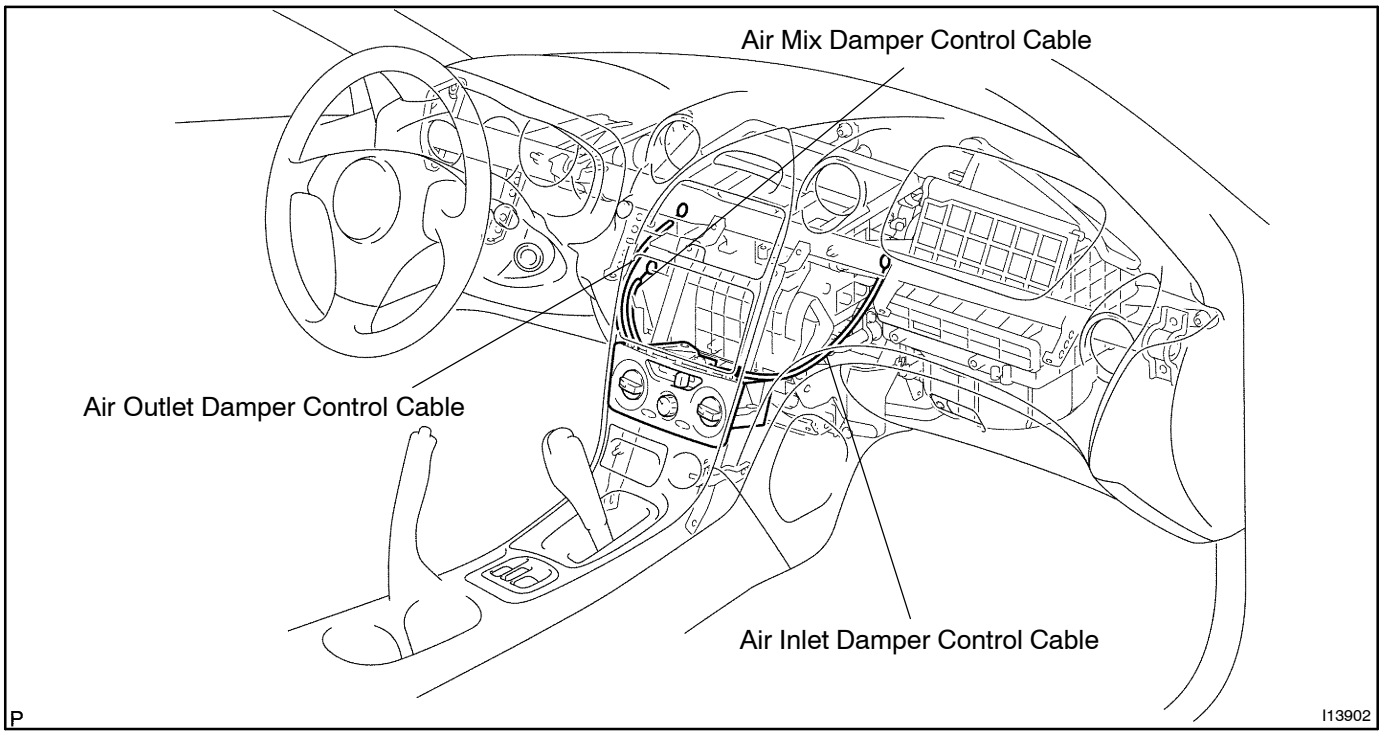

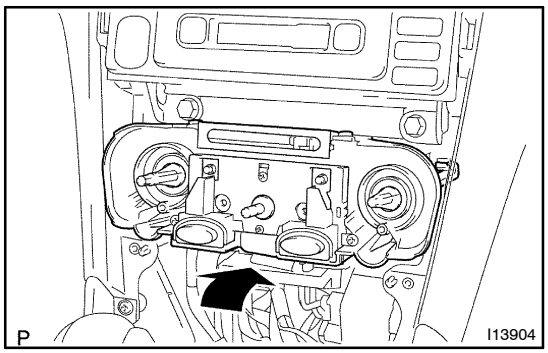


(c) Fit the 2 claws of heater control assembly in the instrument panel hole.

3. LHD models:
CONNECT A/C CONTROL CABLES

(a) Set air inlet control lever to ”RECIRC” position.


(b) Set temperature control dial to ”MAX. COOL” position.

(c) Set mode control dial to ”DEF” position.

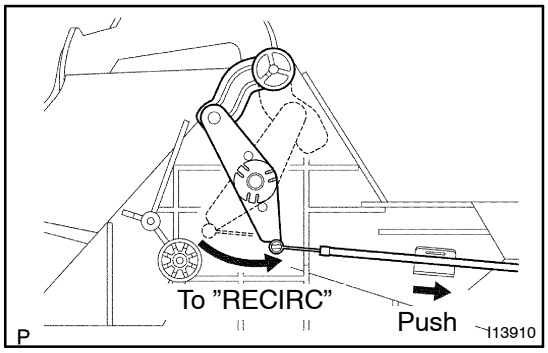


(d) Adjust air inlet damper control cable.
Set air inlet damper control lever to ”RECIRC” position and connect the inner cable to lever pin and clamp the outer cable.

HINT:
Lock the clamp while lightly pushing the outer cable to the direction shown by arrow in the illustration.

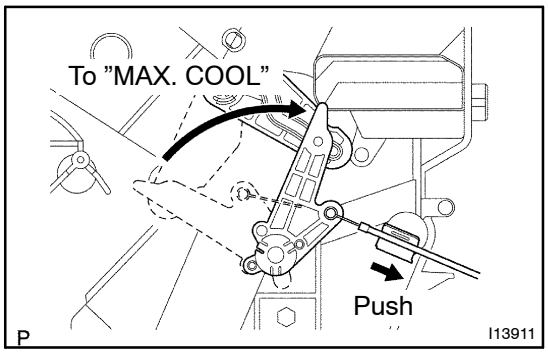

(e) Adjust air mix damper control cable.
Set air mix damper control lever to ”MAX. COOL” position and connect the inner cable to lever pin and clamp the outer cable.

HINT:
Lock the clamp while lightly pushing the outer cable to the direction shown by arrow in the illustration.

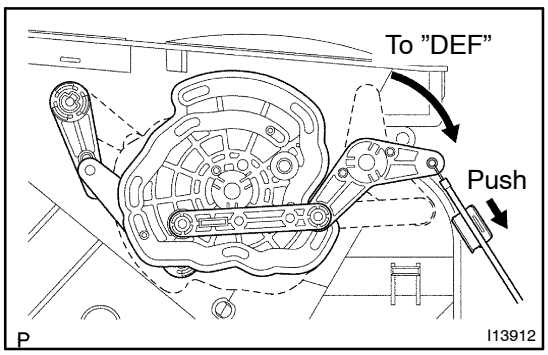


(f) Adjust air outlet damper control cable.
Pull the air outlet damper control link to ”DEF” position, connect the control cable and lock the clamp.

HINT:
Lock the clamp while lightly pushing the outer cable to the direction shown by arrow in the illustration.


4. RHD models:
CONNECT A/C CONTROL CABLES

(a) Set air inlet control lever to ”FRESH” position.
(b) Set temperature control dial to ”MAX. COOL” position.
(c) Set mode control dial to ”FACE” position.

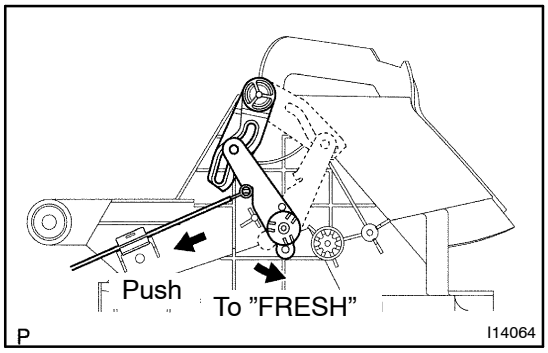


(d) Adjust air inlet damper control cable.
Set air inlet damper control lever to ”FRESH” position and connect the inner cable to lever pin and clamp the outer cable.

HINT:
Lock the clamp while lightly pushing the outer cable to the direction shown by arrow in the illustration.

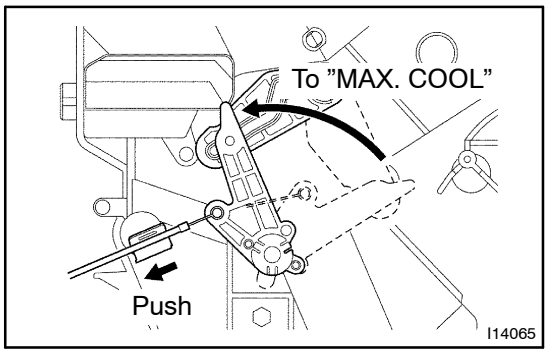

(e) Adjust air mix damper control cable.
Set air mix damper control lever to ”MAX. COOL” position and connect the inner cable to lever pin and clamp the outer cable.

HINT:
Lock the clamp while lightly pushing the outer cable to the direction shown by arrow in the illustration.

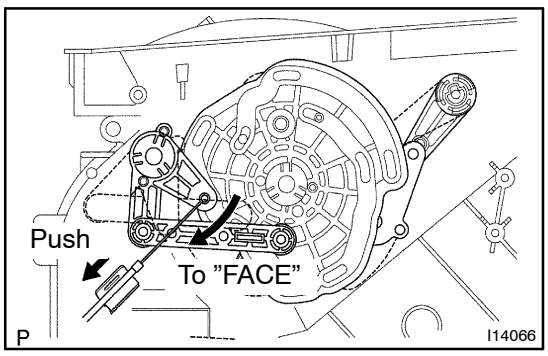

(f) Adjust air outlet damper control cable.
Pull the air outlet damper control link to ”FACE” position, connect the control cable and lock the clamp.

HINT:
Lock the clamp while lightly pushing the outer cable to the direction shown by arrow in the illustration.