WATER TEMPERATURE SWITCH


AC2JA–01

INSPECTION


1. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:

It is not necessary to drain out all the coolant.

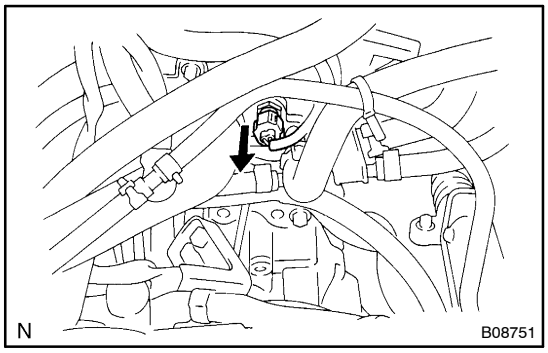

2. REMOVE WATER TEMPERATURE SWITCH

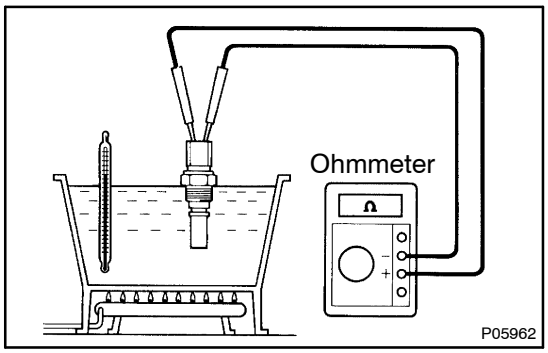

3. INSPECT SWITCH CONTINUITY

(a) Using an ohmmeter, check that no continuity exists between the terminals when the coolant temperature is above 90 °C (194 °F).

(b) Using an ohmmeter, check that continuity exists between the terminals when the coolant temperature is below 83 °C (181 °F).

If no continuity exists, replace the switch.

4. INSTALL WATER TEMPERATURE SWITCH

5. REFILL ENGINE COOLANT