
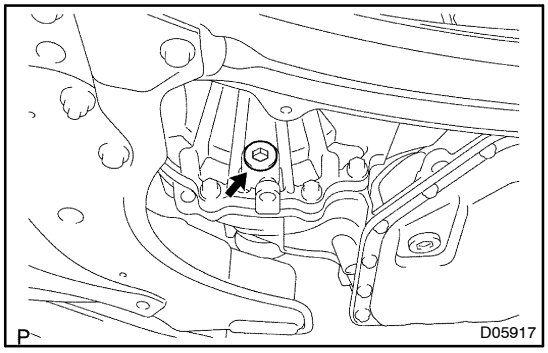


DIFFERENTIAL OIL SEAL

AX0LN–01

ON–VEHICLE REPAIR


1. **DRAIN ATF FROM FRONT DIFFERENTIAL CASE**
2. **REMOVE LH AND RH DRIVE SHAFTS**
   (See page SA–19)

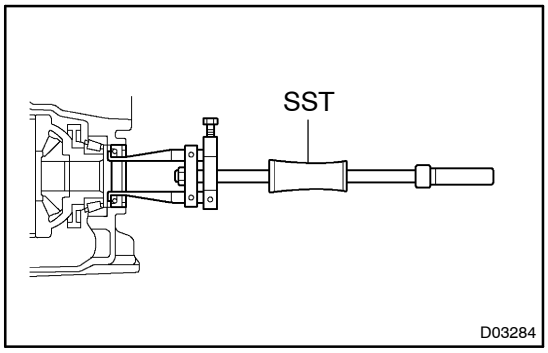

3. **REMOVE LH AND RH SIDE OIL SEAL**

Using SST, drive out both the side oil seals.

SST 09308–10010

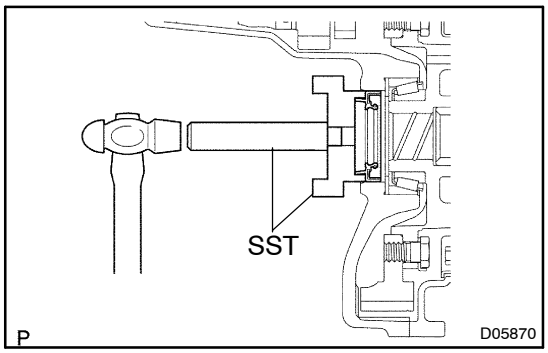


4. **INSTALL LH SIDE OIL SEAL**

(a) Using SST and a hammer, drive in a new oil seal.

SST 09350–32014 (09351–32150), 09950–70010 (09951–07150)

Oil seal drive in depth: 2.7 ± 0.5 mm (0.106 ± 0.020 in.)

(b) Coat the oil seal lip with MP grease.

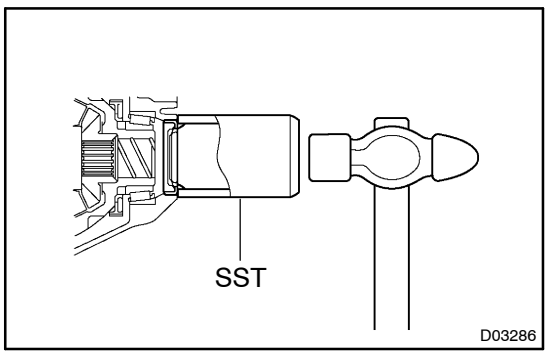

5. **INSTALL RH SIDE OIL SEAL**

(a) Using SST and a hammer, drive in a new oil seal.

SST 09223–00010

Oil seal drive in depth: 0 ± 0.5 mm (0 ± 0.020 in.)

(b) Coat the oil seal lip with MP grease.

6. **INSTALL LH AND RH DRIVE SHAFTS**
   (See page SA–28)
7. **FILL ATF AND CHECK ATF LEVEL**
   (See page DI–4)