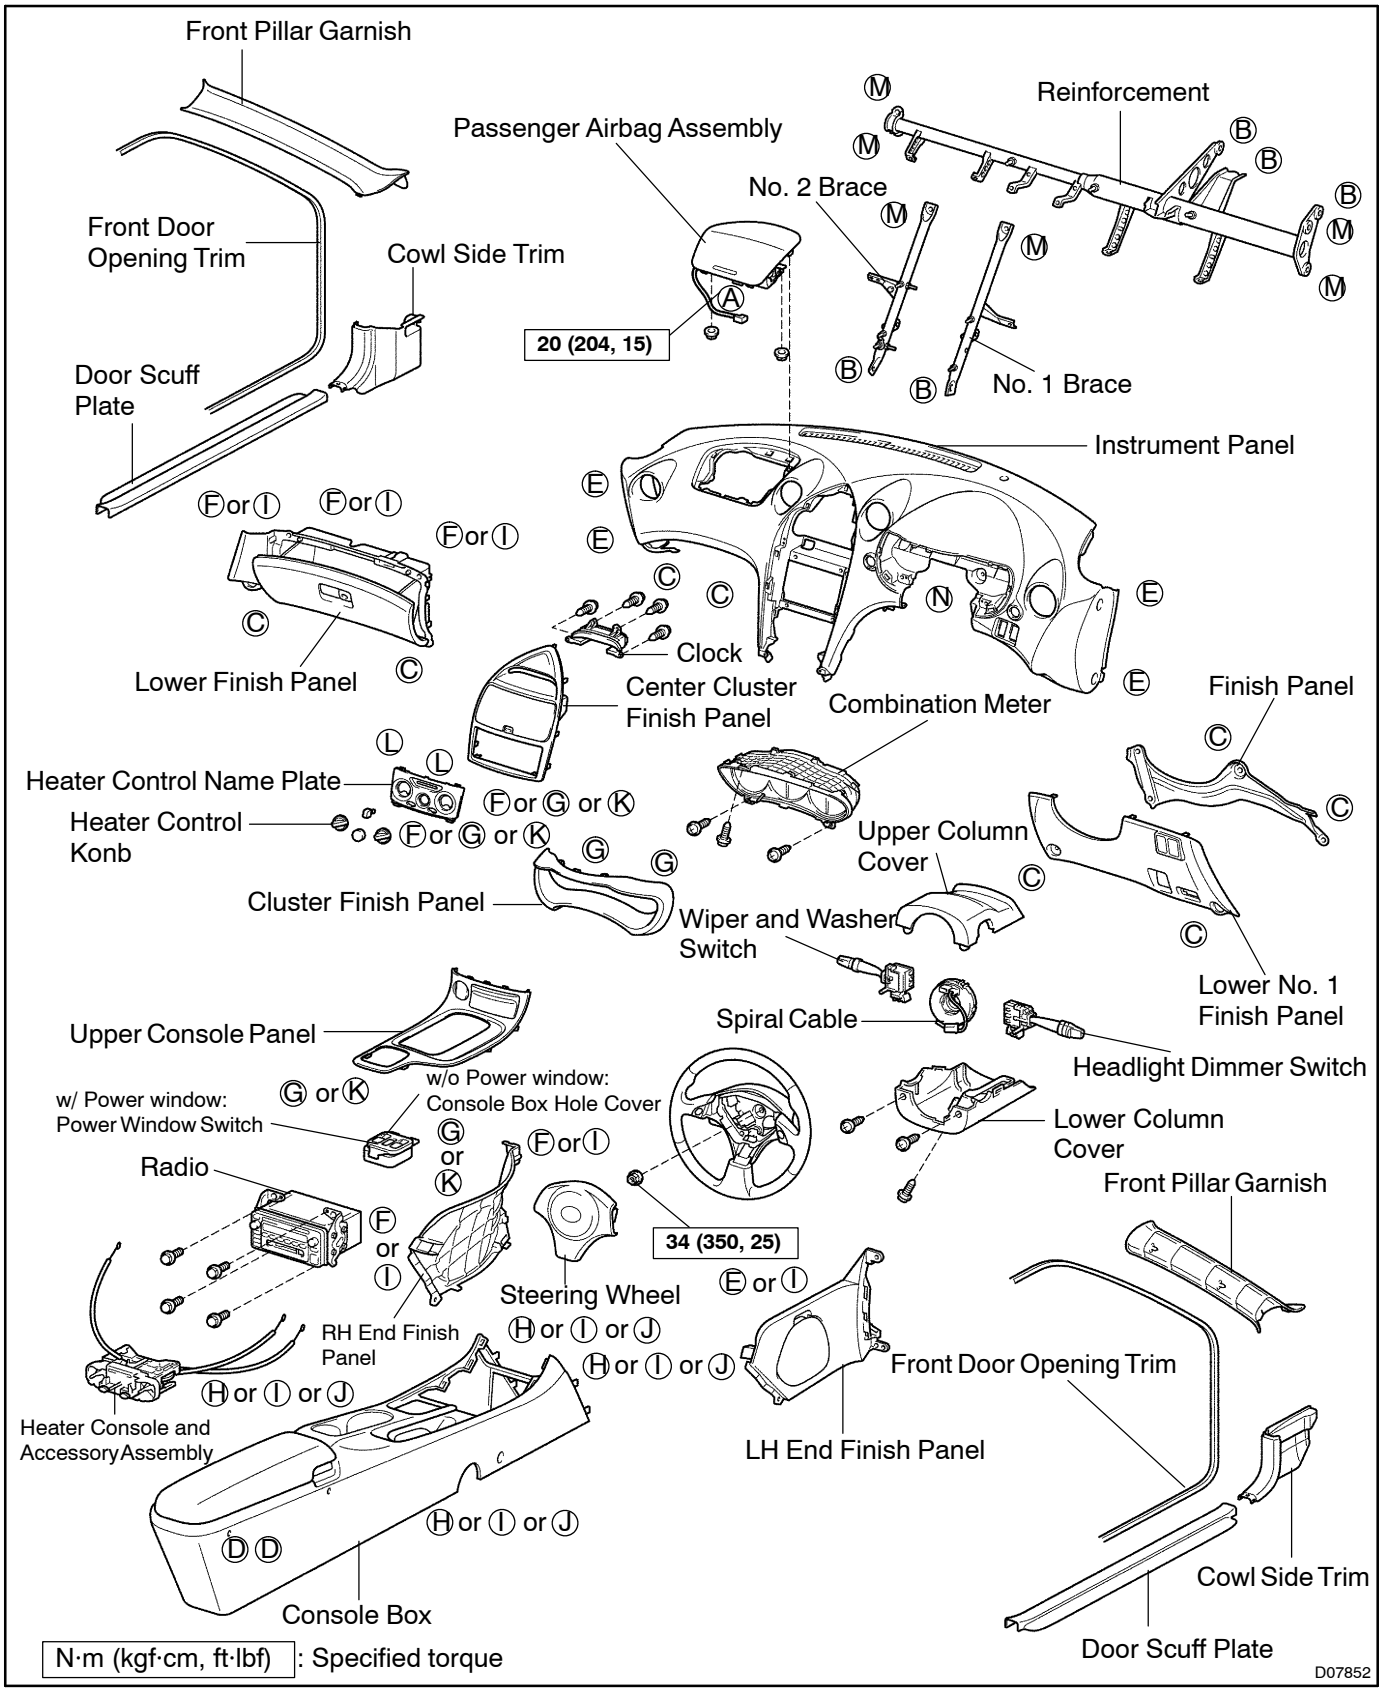
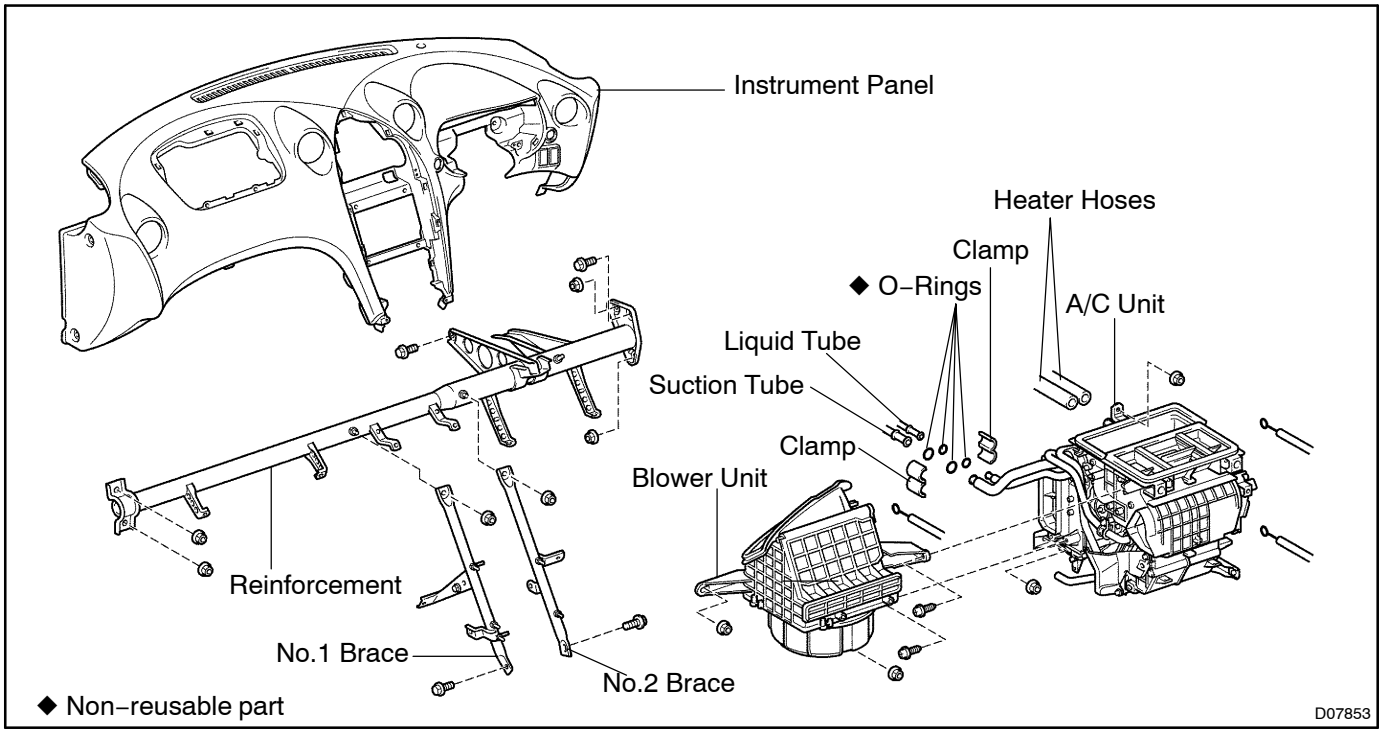
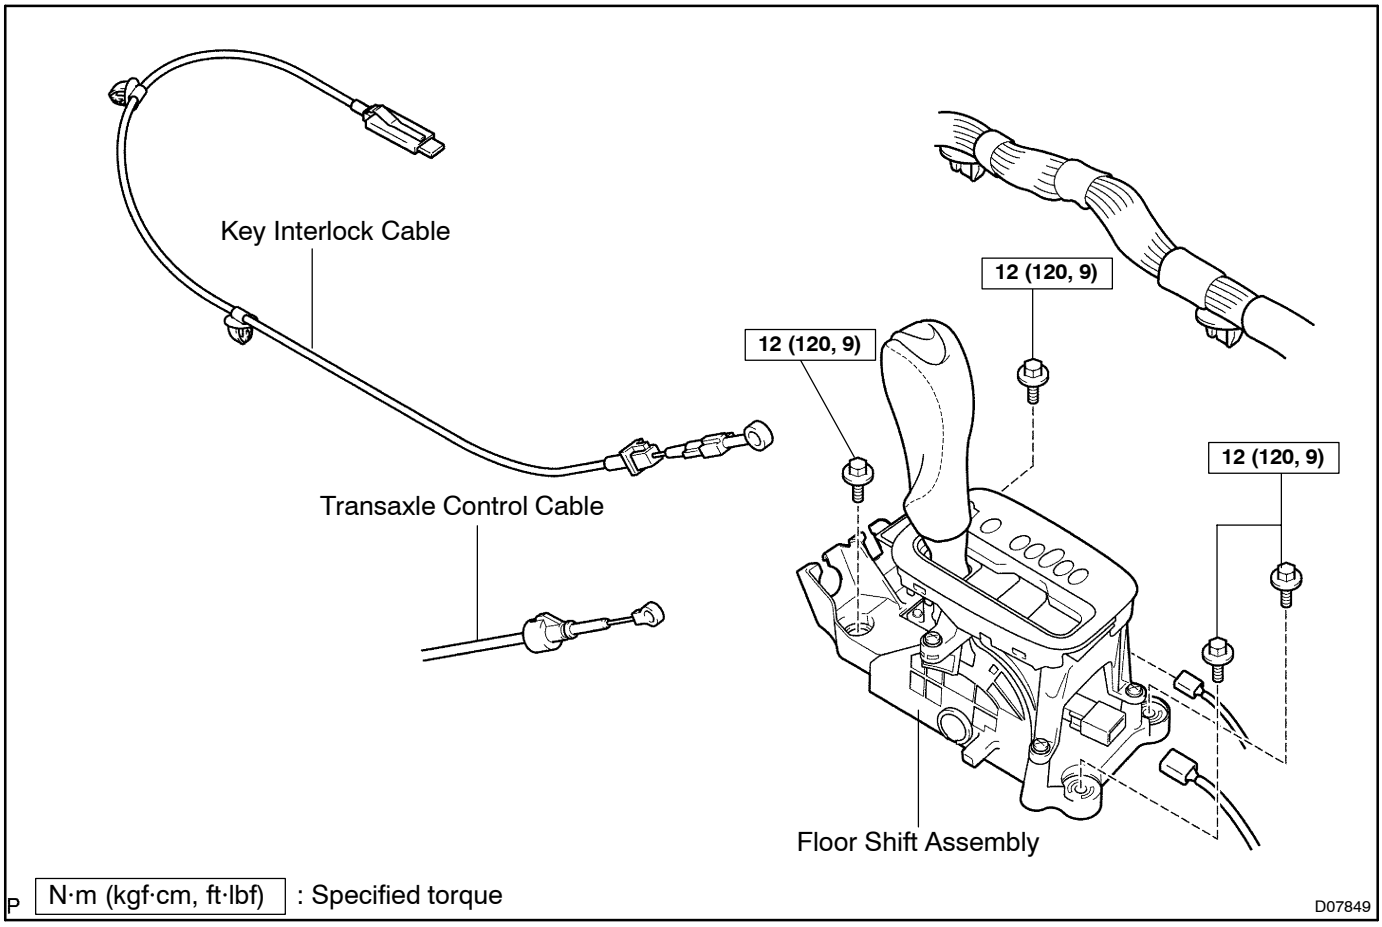
FLOOR SHIFT ASSEMBLY

COMPONENTS

AX0LT–01

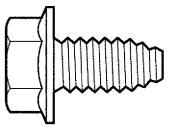
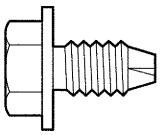

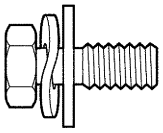
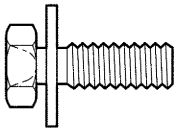











Instrument Panel
Heater Hoses
Clamp
◆ O–Rings
A/C Unit
Liquid Tube
Suction Tube
Clamp
Blower Unit
Reinforcement
No.1 Brace
No.2 Brace
◆ Non–reusable part
D07853


Key Interlock Cable
12 (120, 9)
12 (120, 9)
12 (120, 9)
Transaxle Control Cable
Floor Shift Assembly
P N·m (kgf·cm, ft·lbf) : Specified torque
D07849

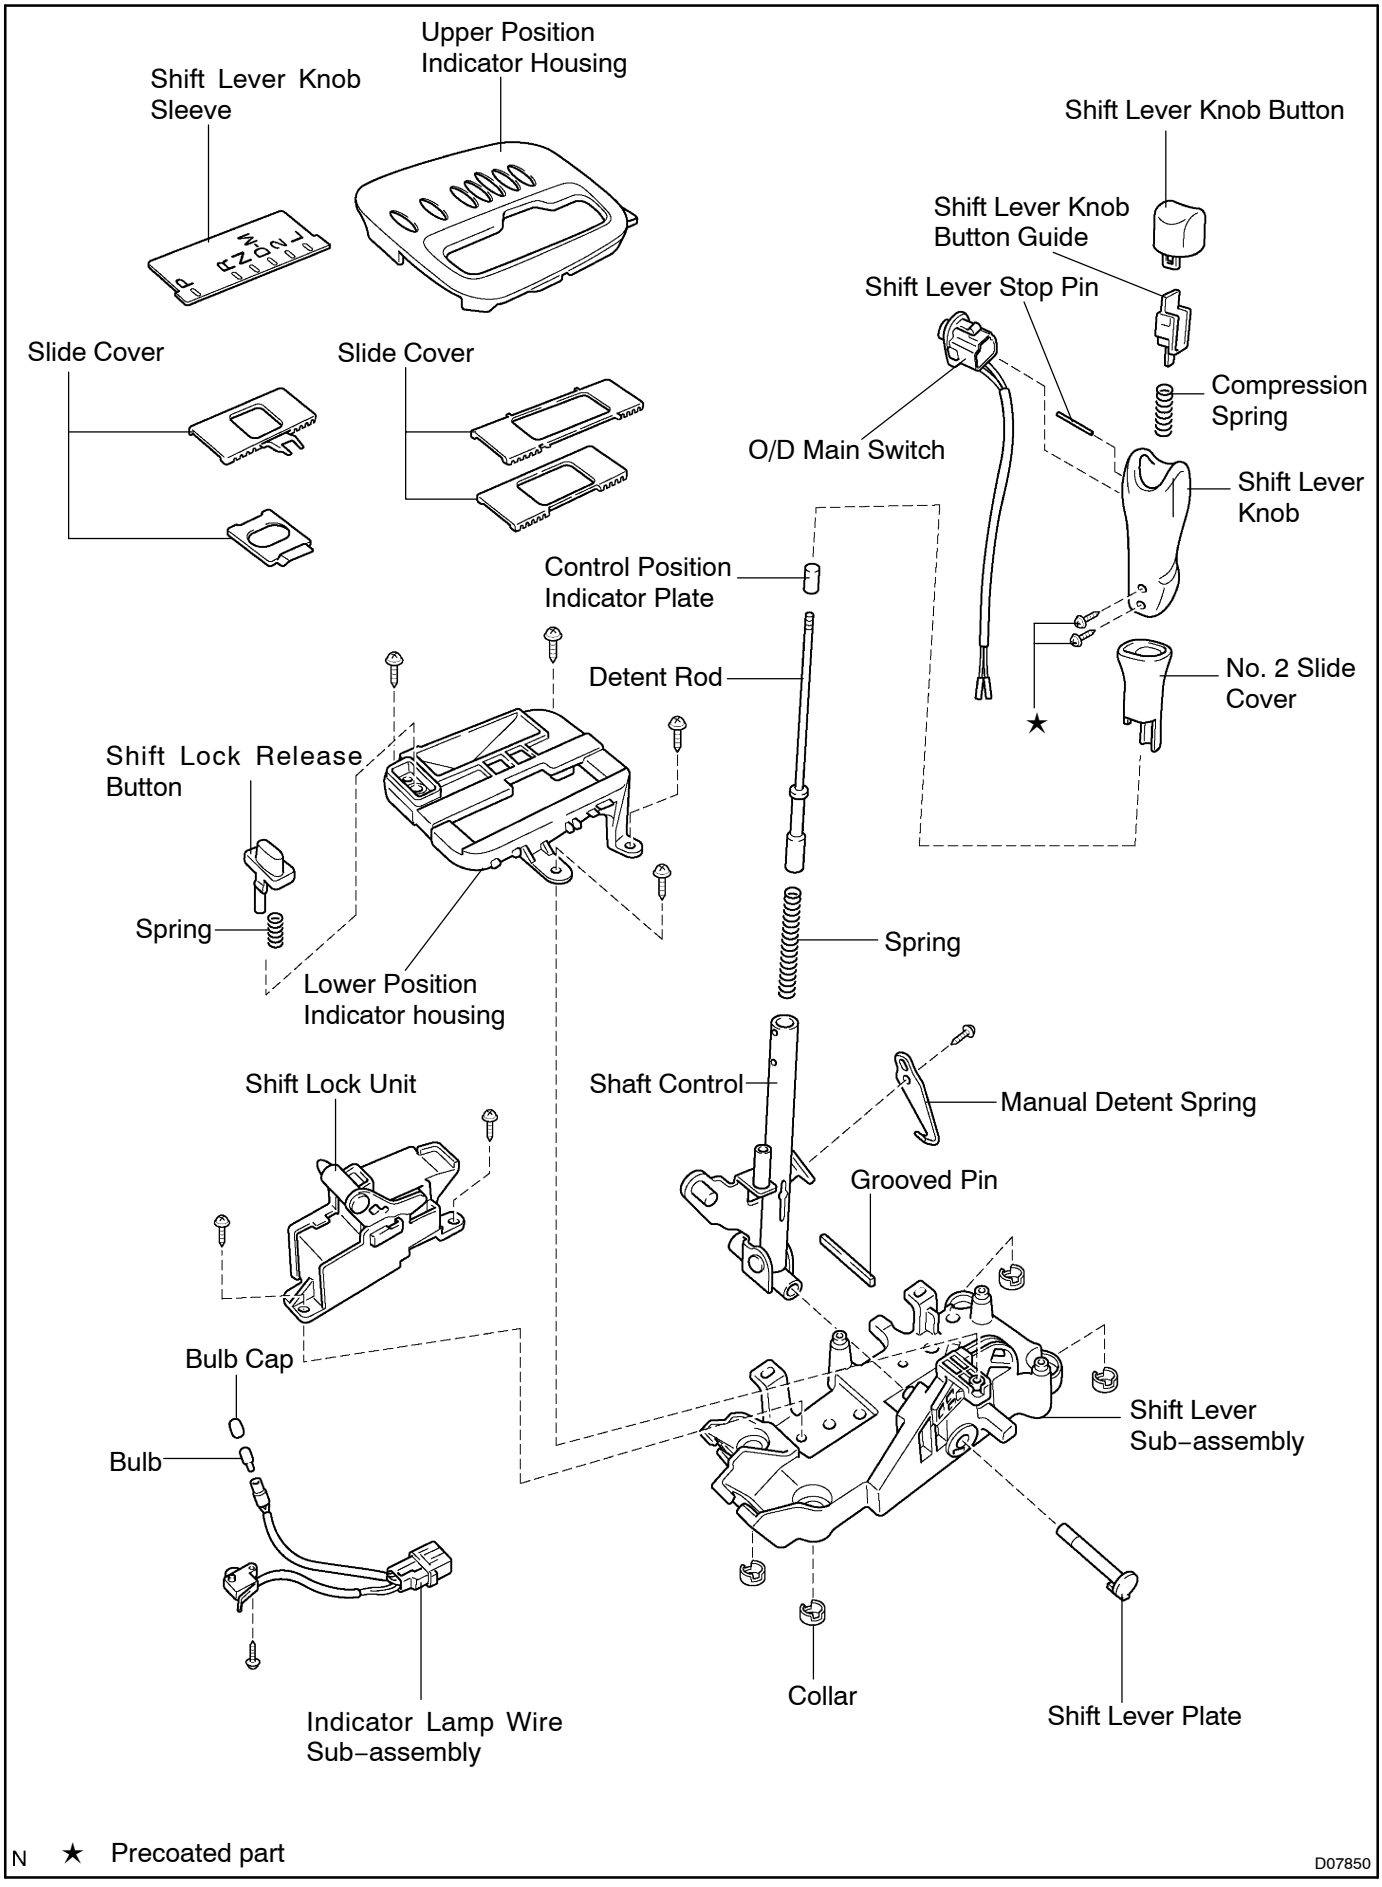
HINT:
Screw shapes and sizes are indicated in the table below. The codes (”A” – ”N”) correspond to those indicated on the previous page.

mm (in.)

	Shape	Size		Shape	Size		Shape	Size
Ⓐ		ø = 8 (0.32) L = 16 (0.63)	Ⓑ		ø = 8 (0.32) L = 15 (0.59)	Ⓒ		ø = 6 (0.24) L = 22 (0.87)
Ⓓ		ø = 6 (0.24) L = 16 (0.63)	Ⓔ		ø = 6 (0.24) L = 18 (0.71)	Ⓕ		ø = 5.22 (0.2055) L = 16 (0.63)
Ⓖ		ø =5.22 (0.2055) L = 16 (0.63)	Ⓗ		ø = 5 (0.20) L = 18 (0.71)	Ⓘ		ø = 5 (0.20) L = 16 (0.63)
Ⓙ		ø = 5 (0.20) L = 16 (0.63)	Ⓚ		ø = 5 (0.20) L = 14 (0.55)	Ⓛ		ø = 4 (0.16) L = 16 (0.63)
Ⓜ		ø = 8 (0.32)	Ⓝ		ø = 6 (0.24)			

P

H12659


Upper Position Indicator Housing
Shift Lever Knob Sleeve
Shift Lever Knob Button
Shift Lever Knob Button Guide
Shift Lever Stop Pin
Compression Spring
Slide Cover
Slide Cover
O/D Main Switch
Shift Lever Knob
Control Position Indicator Plate
Detent Rod
No. 2 Slide Cover
Shift Lock Release Button
Spring
Lower Position Indicator housing
Spring
Shift Lock Unit
Shaft Control
Manual Detent Spring
Grooved Pin
Bulb Cap
Bulb
Shift Lever Sub–assembly
Collar
Shift Lever Plate
Indicator Lamp Wire Sub–assembly
N ★ Precoated part
D07850