
AX0LU–01

REMOVAL


1. REMOVE INSTRUMENT PANEL (See page BO–80)
2. REMOVE A/C UNIT (See page AC–26)

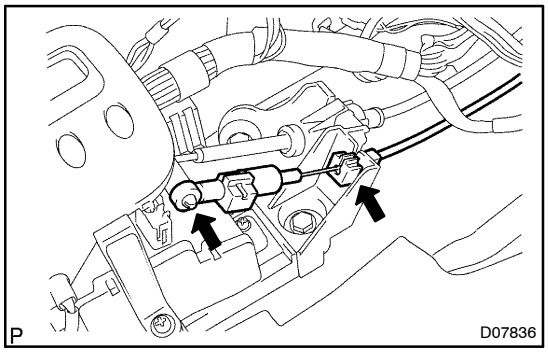


3. REMOVE KEY INTERLOCK CABLE

(a) Remove the cable end from the rod of the floor shift assembly.

(b) Pull out the cable while pressing the clip of the key interlock cable.

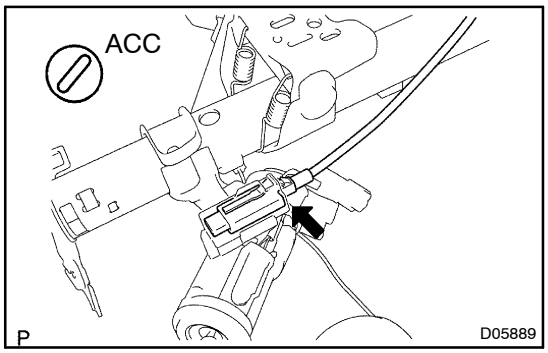

(c) With the key in ACC, remove the cable cap claw from the key interlock and pull it.

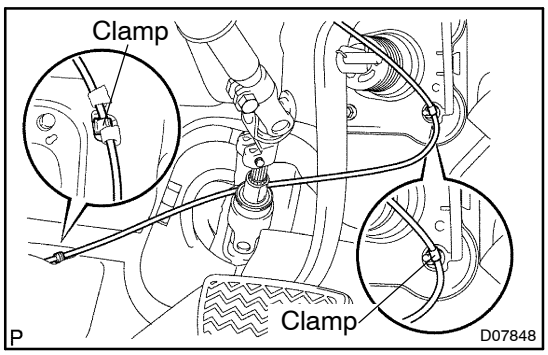


(d) Disconnect the 2 key interlock cable clamps.


4. REMOVE FLOOR SHIFT ASSEMBLY

(a) Disconnect the 2 connectors.

(b) Disconnect the 2 wire harness clamps from the floor shift assembly.

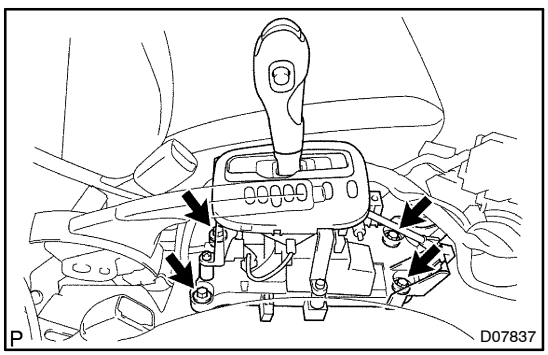

(c) Remove the 4 bolts from the floor shift assembly.

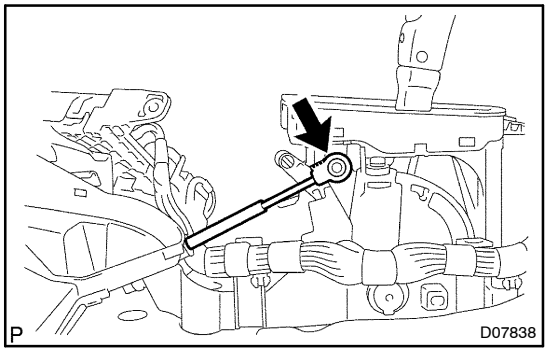

(d) Remove the cable end from the rod of the floor shift assembly.
(e) Pull out the cable while pressing the clip of the transaxle control cable.
(f) Remove the floor shift assembly.