
AX0LS–01

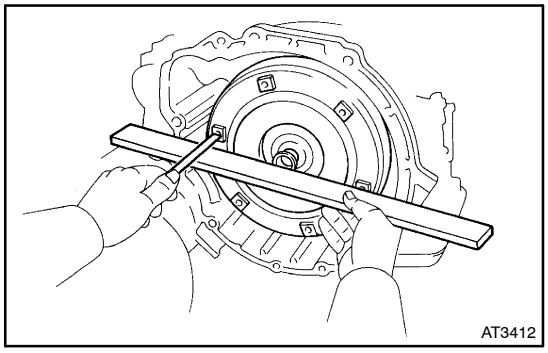

INSTALLATION

1. CHECK TORQUE CONVERTER INSTALLATION

Using calipers and a straight edge, measure the distance between the installed surface and the front surface of the transaxle housing.

Correct distance: More than 13.3 mm (0.524 in.)

2. TRANSAXLE INSTALLATION

Installation is in the reverse order of removal (See page AX–31).

HINT:

- After installation, adjust the shift control cable and neutal start switch (See page DI–4).
- Fill ATF and check the fluid level (See page DI–4).
- Perform the test drive of the vehicle.
- Adjust the hood (See page BO–9).