
IGNITION SWITCH AND KEY UNLOCK WARNING SWITCH

BE0OP–04

LOCATION

Center Junction Block shall be installed in the right side for both RHD and LHD.

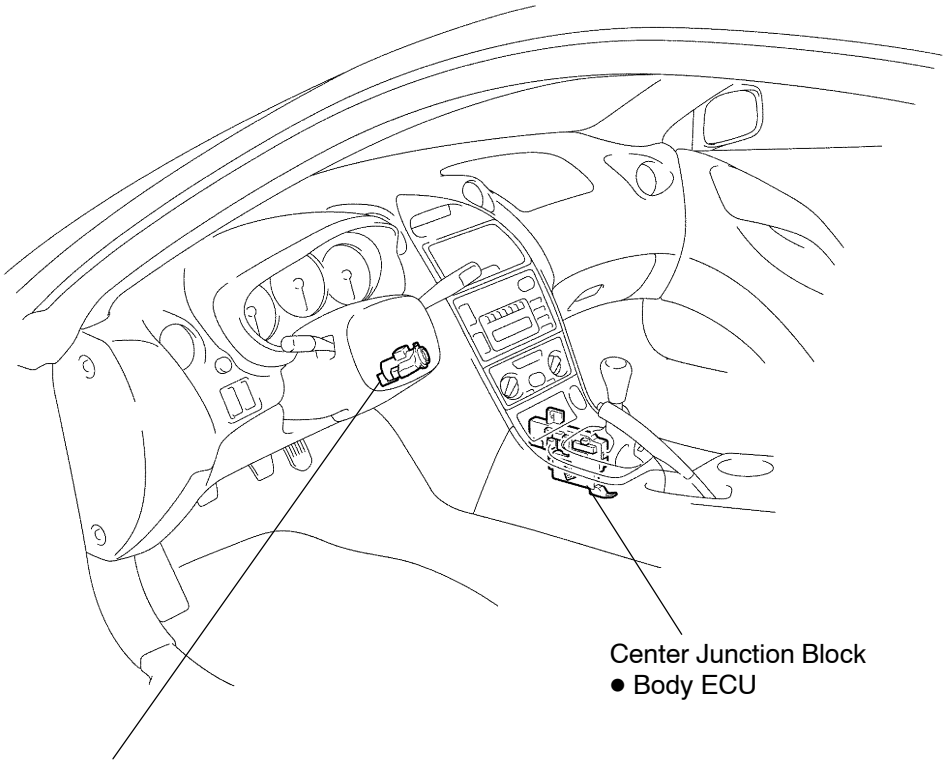

P I13314