
BE0OQ–03

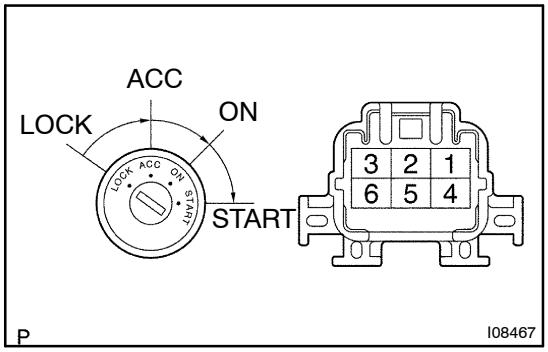



# INSPECTION

## 1. INSPECT IGNITION SWITCH CONTINUITY

| Switch position | Tester connection | Specified condition |
|---|---|---|
| LOCK | – | No continuity |
| ACC | 1 – 3 | Continuity |
| ON | 1 – 2 – 3<br>5 – 6 | Continuity |
| START | 1 – 2<br>4 – 5 – 6 | Continuity |


If continuity is not as specified, replace the switch.

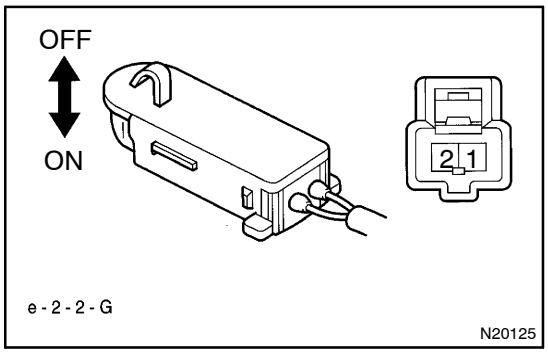


## 2. INSPECT KEY UNLOCK WARNING SWITCH CONTINUITY

| Switch position | Tester connection | Specified condition |
|---|---|---|
| OFF (Key removed) | – | No continuity |
| ON (Key set) | 1 – 2 | Continuity |

If continuity is not as specified, replace the switch.

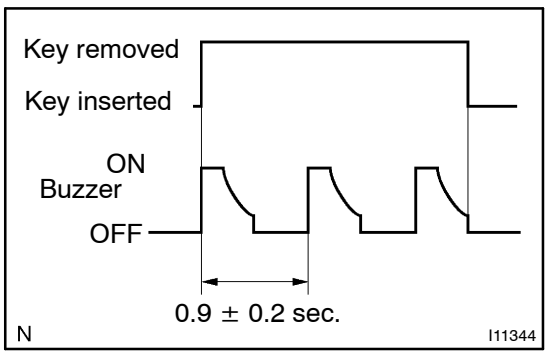


## 3. INSPECT KEY UNLOCK WARNING BUZZER

Check that the buzzer sound when driver's door is opened and key inserted.

If operation is not as specified, replace the combination meter. (See page BE–48)