BE1EN–01


INSPECTION

1. INSPECT HEADLIGHT BEAM LEVEL CONTROL SWITCH CURRENT

NOTICE:

If a resister is not placed, switch may be damaged.

Measure the current between terminal 4 or 5.

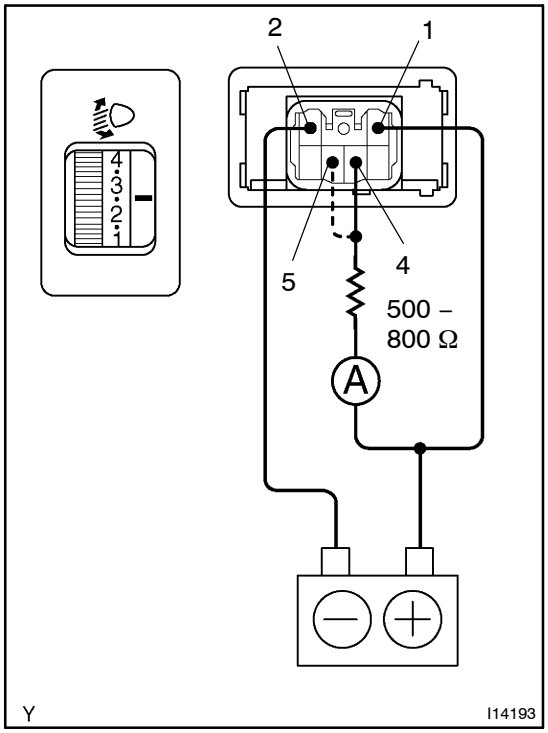


Switch position	Current (mA)
0	Approx. 8.0
1	Approx. 7.2
2	Approx. 6.4
3	Approx. 5.6
4	Approx. 4.8
5	Approx. 4.0

If current value is not as specified, replace the switch.

2. INSPECT HEADLIGHT BEAM LEVEL CONTROL SWITCH ILLUMINATION

Connect the positive (+) lead from the battery to terminal 3 and the negative (–) lead to terminal 6, and check that the illumination light light up.

If operation is not as specified, replace the switch.

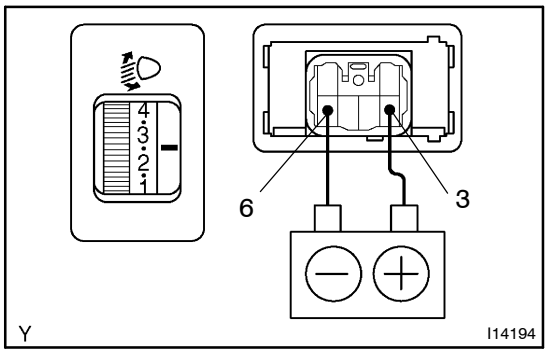


3. INSPECT HEADLIGHT BEAM LEVEL CONTROL ACTUATOR OPERATION

NOTICE:

If a resister is not placed, switch may be damaged.

Disconnect connector and inspect connector on wire harness as shown in the chart.

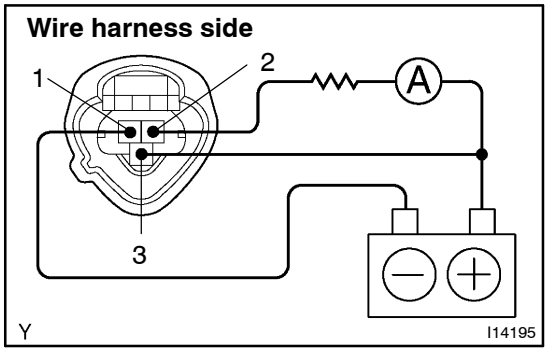

Switch position	Current (mA)
0	Approx. 8.0
1	Approx. 7.2
2	Approx. 6.4
3	Approx. 5.6
4	Approx. 4.8
5	Approx. 4.0

If current value is not as specified, replace the actuator.