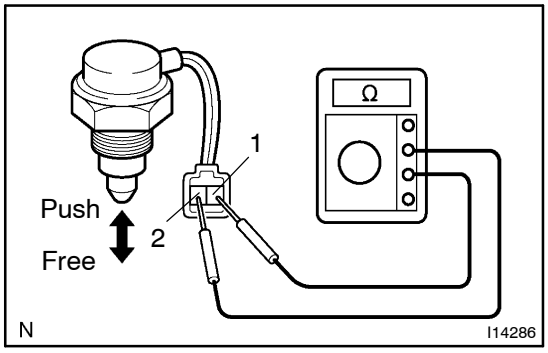



BE0P3–03

# INSPECTION

## 1. INSPECT BACK–UP LIGHT SWITCH CONTINUITY

| Switch position | Tester connection | Specified condition |
|---|---|---|
| Free | 1 – 2 | No continuity |
| Push | 1 – 2 | Continuity |

If continuity is not as specified, replace the switch.

## 2. INSPECT NEUTRAL START SWITCH CONTINUITY

(See page DI–46)