
BE1D0–02

INSPECTION

INSPECT STOP LIGHT SWITCH CONTINUITY


w/o cruise control system:

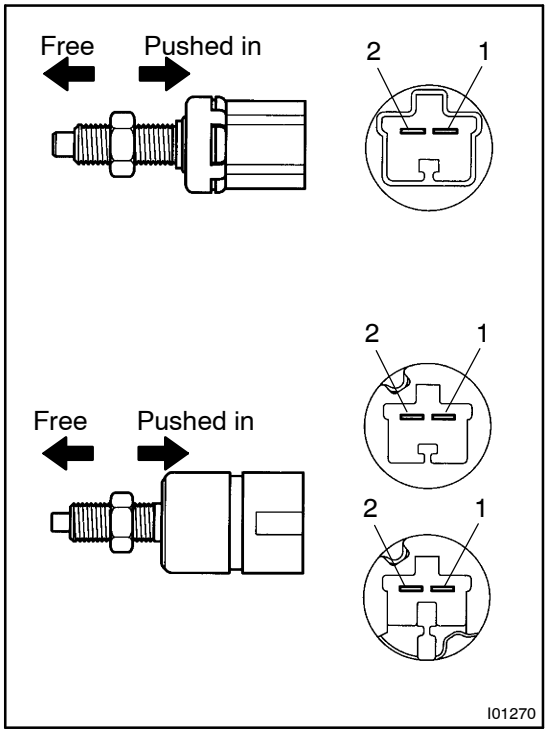

Switch position	Tester connection	Specified condition
Switch pin pushed in (Pedal released)	–	No continuity
Switch pin free (Pedal depressed)	1 – 2	Continuity

If continuity is not as specified, replace the switch.

w/ cruise control system:

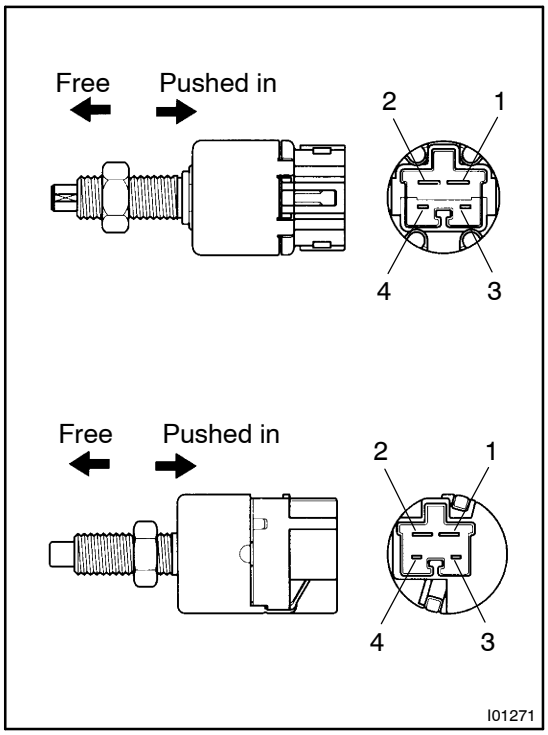

Switch position	Tester connection	Specified condition
Switch pin pushed in (Pedal released)	–	No continuity
Switch pin free (Pedal depressed)	1 – 2	Continuity

If continuity is not as specified, replace the switch.