
BE1D3–02

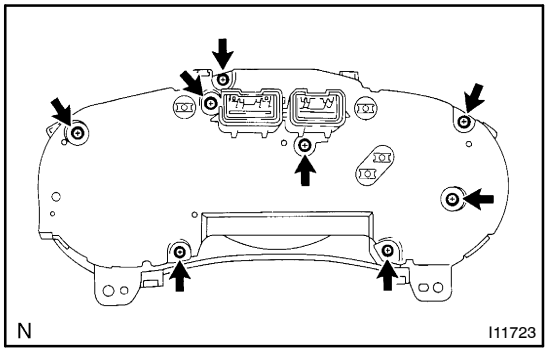


DISASSEMBLY


COMBINATION METER COVER:

(a) Remove the 8 screws.


(b) Remove the combination meter cover.

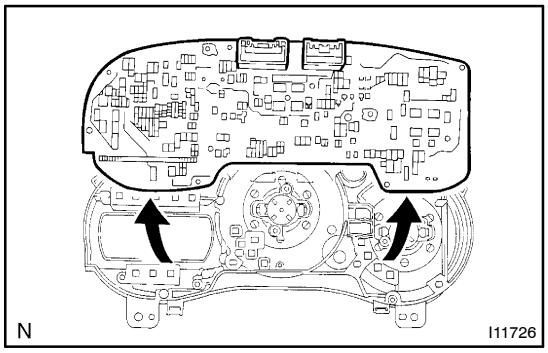

(c) Remove the meter circuit plate.

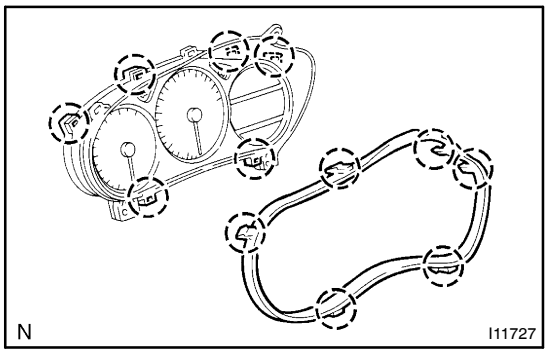

(d) Remove the 6 clips and the meter glass.

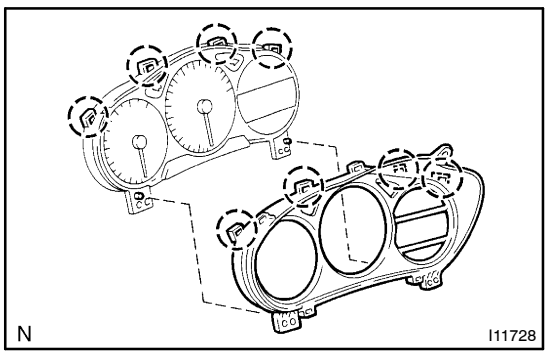

(e) Remove the 4 clips and the meter plate.