
BE1F1–01

REPLACEMENT

1. REPLACE TRANSMITTER (LITHIUM) BATTERY

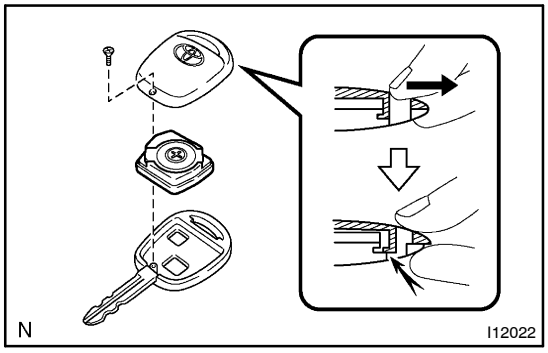

NOTICE:

Special caution should be taken for handling each component as they are precision electronic components.

(a) Using a screwdriver, remove the screw and cover.


NOTICE:

Do not pry out the cover forcibly.


HINT:

Push the cover with a finger as shown in the illustration, so that there becomes clearance, then pry out the cover from that clearance.

(b) Remove the transmitter.

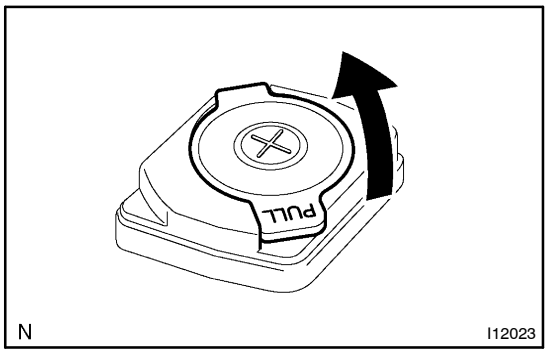

(c) Pull out the battery cover.

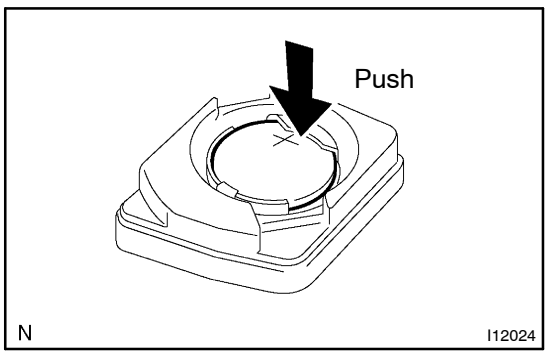

(d) Remove the battery (lithium battery) as shown in the illustration.

NOTICE:

- **Do not push the terminals with a finger.**
- **If prying up the battery (lithium battery) forcibly to remove, the terminals are deformed.**

(e) Install a battery (lithium battery).

NOTICE:

Face the battery upward. Take care not to deform the terminals.

(f) Check that O–ring is not distorted or slipped off, and install the cover.

NOTICE:

When the shrews are tightened loosely, it might cause faulty contact of battery (lithium battery) and terminals.

(g) Assemble the transmitter to the key plate and the cover.

(h) Using a screwdriver, tighten the screw.

2. REPLACE DOOR CONTROL RECEIVER AND TRANSMITTER

NOTICE:

When replacing the door control receiver and transmitter, registration of recognition code is necessary because they are provided as single components.

(a) Select which operation mode should be performed from the following modes.
- Add mode
- Rewrite mode
- Prohibition mode
- Confirmation mode

HINT:
- The add mode is used to retain codes already registered while you register new recognition codes. This mode is used when adding a transmitter. However, if the number of registered codes exceeds 4 codes, previously registered codes are correspondingly erased in order, starting from the first registered code.
- The rewrite mode is used to erase all previously registered codes and register only new recognition codes.
- The prohibition mode is used to erase all registered codes and cancels the wireless door lock function. Use this mode when the transmitter is lost.
- The confirmation mode is for confirming how many recognition codes are already registered before you register additional recognition codes.

(b) Follow the chart on the following pages to register the transmitter recognition code at the wireless door lock control receiver.

HINT:
- When procedure is out of the specified, the operation returns to normal operation.
- Maximum 4 recognition codes can be registered.


Start registration of recognition code

The vehicle should be in the following conditions.
- The key is not inserted in the ignition key cylinder.
- Driver's door is OPEN. (Other doors are CLOSED)
- Driver's door is UNLOCKED.

Insert the key into the ignition key cylinder, then pull it out. (Rerform this twice within 5 seconds)

Within 40 secs.


Open and close the door (manual operation) 2 times.

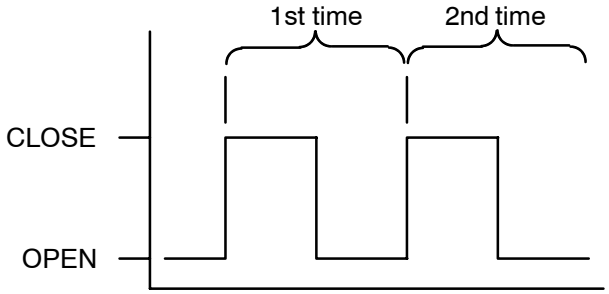

Insert the key into the ignition key cylinder, then pull it out.

Within 40 secs.

Again open and close the door (manual operation) 2 times.

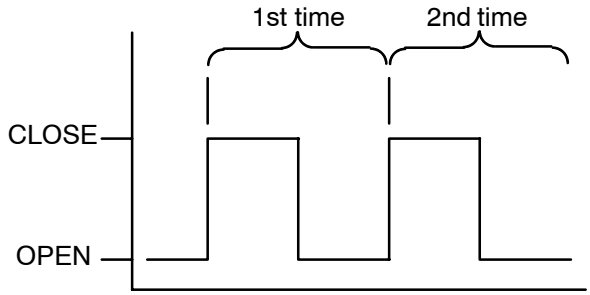


Close the all door and insert the key into the ignition key cylinder.

Turn the ignition switch from ON to LOCK at approx. 1 sec. interval 1 to 5 times to select the mode.


Add mode

ON – LOCK change occurs 1 time

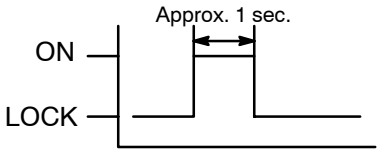


Confirmation mode

ON – LOCK change occurs 3 times

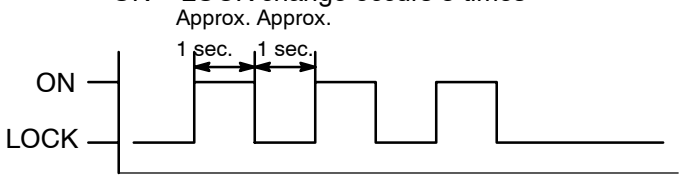


Rewrite mode

ON – LOCK change occurs 2 times

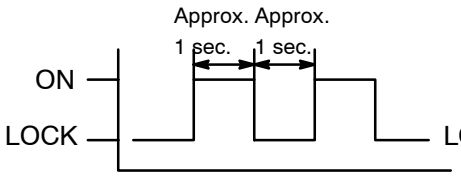

Prohibition mode

ON – LOCK change occurs 5 times

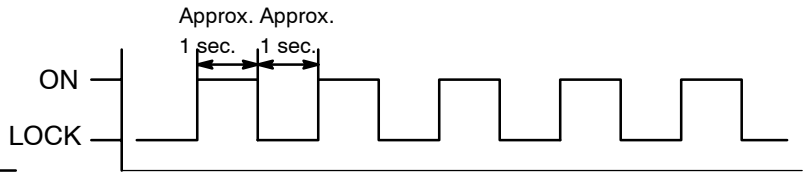

Pull out the key from the ignition key cylinder.


Within 3 secs.

When add mode or rewrite mode is selected.

Door control relay automatically performs the LOCK–UNLOCK operation once or twice at 1 sec. interval to inform the operator that either the add mode or rewrite mode has been selected.


LOCK–UNLOCK occurs once

Indicates that add mode has been selected.



LOCK–UNLOCK occurs twice

Indicates that rewrite mode has been selected.

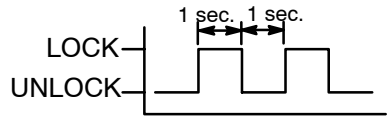

When prohibition mode is selected.

When confirmation mode is selected.


Door control relay automatically performs the LOCK–UNLOCK operation 1 to 4 times at 2 sec. interval to inform the operator of the number of the registered codes.

HINT:

When the number of the registered code is 0, the operation is automatically performed 5 times.

Example:

When the operation is performed twice, it directs that 2 types of recognition code have been registered.

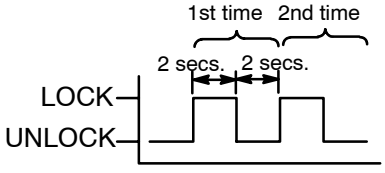


Registration of recognition code (Confirmation mode and prohibition mode) is completed.

When prohibition mode is selected.

Within 40 secs.

Door control relay performs LOCK–UNLOCK operation 5 times at a 1 sec. interval to inform the operator that prohibition mode has been selected.

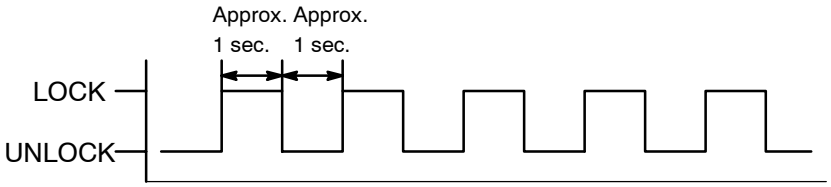

Press the lock and unlock switches on the transmitter switch simultaneously for more than between 1 sec. or more and 1.5 sec. below.

Within 3 secs.

Press either one of 2 switches on the transmitter.

Within 3 secs.

Door control relay automatically performs LOCK–UNLOCK operation once or twice at a 1 sec. interval to inform the operator that the receiver has received the signal from the transmitter.

LOCK–UNLOCK occurs once

Registration of recognition code is completed

LOCK–UNLOCK occurs twice

Registration of recognition code has not been completed.

- Recognition code received first time and second time did not match.
- When selecting add mode, a registered recognition code was received.

If LOCK–UNLOCK operation can not be performed at all, the mode returns to the normal mode, then start with ”Start registration of recognition code”.

Proceed to finish registration

Proceed to continue registration

Within 40 secs.

If even one of the following conditions is satisfied, registration of recognition codes is completed.

- 40 secs. elapses since the door control relay response.
- The driver’s door is opened.
- The key plate is inserted in the ignition key cylinder.
- 4 type recognition codes are registration at one time.

Registration of recognition codes (add mode or rewrite mode) is completed.