
BE1DB–02

INSPECTION

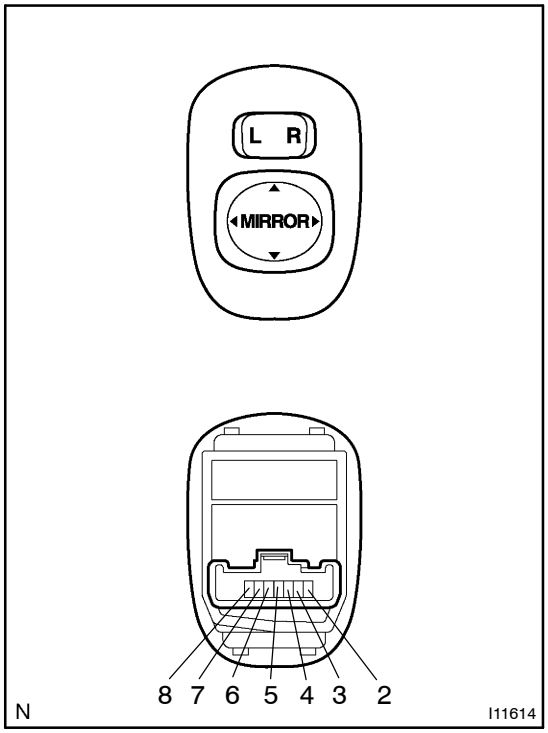


1. INSPECT LEFT SIDE MIRROR SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
UP	4 – 8 6 – 7	Continuity
DOWN	4 – 7 6 – 8	Continuity
LEFT	5 – 8 6 – 7	Continuity
RIGHT	5 – 7 6 – 8	Continuity

2. INSPECT RIGHT SIDE MIRROR SWITCH CONTINUITY


Switch position	Tester connection	Specified condition
OFF	–	No continuity
UP	3 – 8 6 – 7	Continuity
DOWN	3 – 7 6 – 8	Continuity
LEFT	2 – 8 6 – 7	Continuity
RIGHT	2 – 7 6 – 8	Continuity

If continuity is not as specified, replace the switch.
If continuity is as specified, inspect the switch circuit.

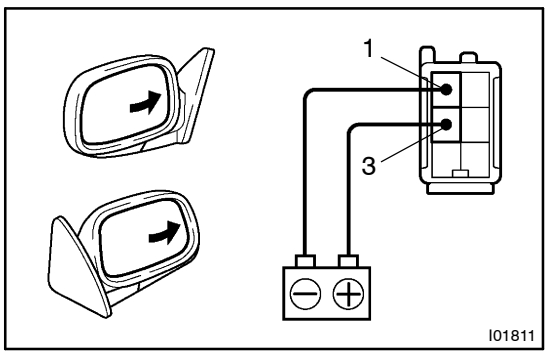


3. INSPECT MIRROR MOTOR OPERATION


(a) Connect the positive (+) lead from the battery to terminal 3 and the negative (–) lead to terminal 1, and check that the mirror turns right side.

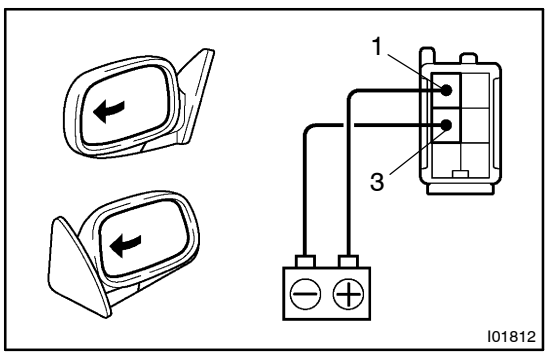

(b) Reverse the polarity, and check that the mirror turns left side.

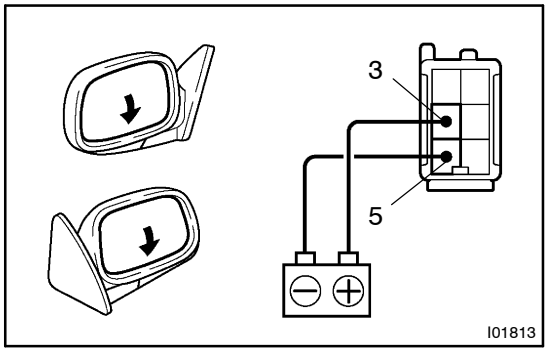

(c) Connect the positive (+) lead from the battery to terminal 3 and the negative (–) lead to terminal 5, and check that the mirror turns to the downward.

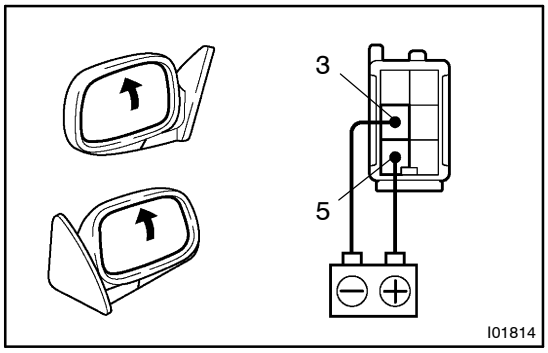

(d) Reverse the polarity, and check that the mirror turns to the upward.

If operation is not as specified, replace the mirror assembly.