
BO2S1–01

REMOVAL

1. **REMOVE UPPER FRONT FENDER APRON SEAL**
2. **REMOVE UPPER RADIATOR SUPPORT SEAL**
3. **REMOVE FRONT BUMPER COVER**
   (See page BO–4)

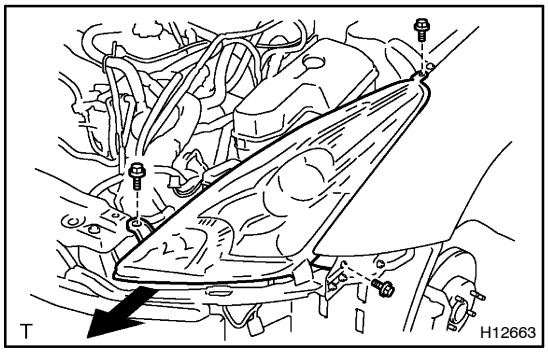


4. **REMOVE HEADLIGHT**

(a) Remove the 3 bolts.

(b) Disconnect the connectors, then remove the headlight as shown in the illustration.

(c) Employ the same manner described above to the other side.

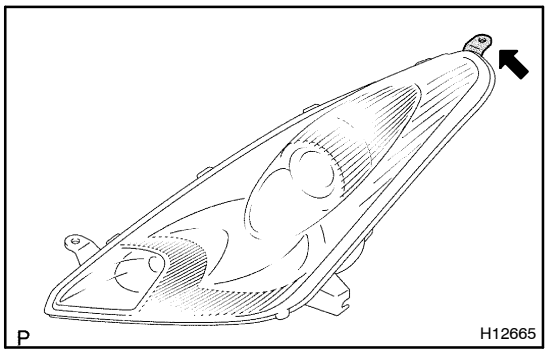

HINT:

At the time of installation, please refer to the following item.

If the shown part of the headlight is damaged, the headlight can be reinstalled to the body by installing a bracket to it.