
BO2SA–01


ADJUSTMENT

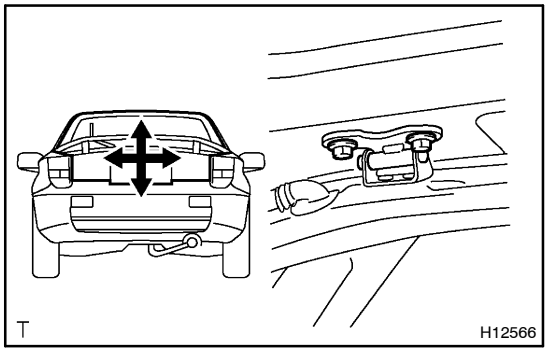

1. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.


Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)

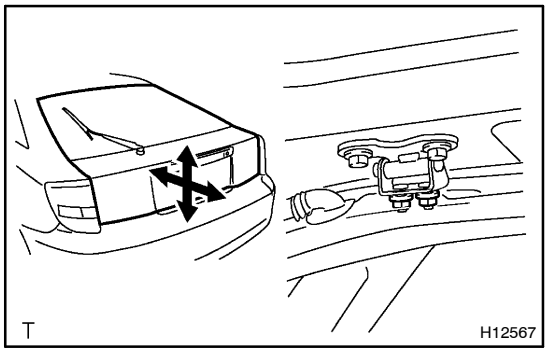

2. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS


Loosen the body side hinge bolts and nuts to adjust.

Torque: 19 N·m (196 kgf·cm, 14 ft·lbf)

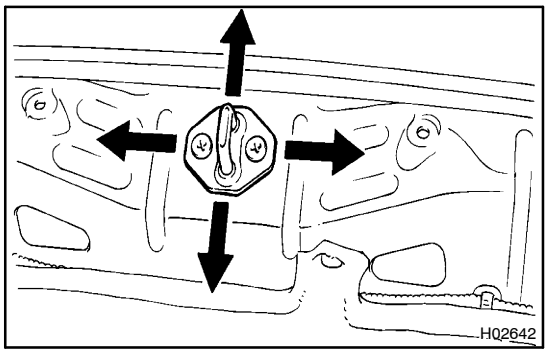

3. ADJUST DOOR LOCK STRIKER

(a) Check that the door fit and door linkages are adjusted correctly.
(b) Remove the luggage compartment mat.
(c) Remove the 2 hooks and rear deck trim cover.
(d) Loosen the striker mounting screws.
Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)
(e) Using a plastic hammer, tap the striker to adjust.
(f) Reinstall the rear deck trim cover and 2 hooks.

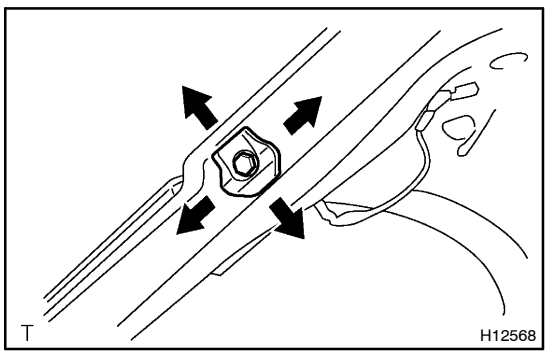

4. ADJUST LOWER STOPPER

Loosen the stopper mounting bolts to adjust.