
BO2SE–01

REMOVAL

1. REMOVE WIPER ARMS

Remove the 2 wiper arm head caps, 2 nuts and 2 wiper arms.

2. REMOVE HOOD TO COWL TOP SEAL

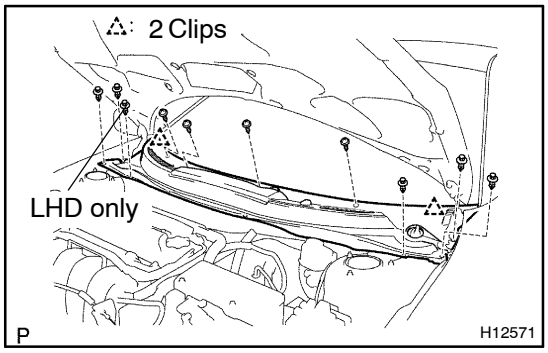

3. REMOVE COWL TOP VENTILATOR LOUVER

(a) LHD:
Remove the 4 screws and 6 clips.


(b) RHD:
Remove the 4 screws and 5 clips.

(c) Using a screwdriver, remove the cowl top ventilator louver, then disconnect the washer hoses.

HINT:

Tape the screwdriver tip before use.


(d) Remove the 2 washer nozzles from the cowl top ventilator louver.

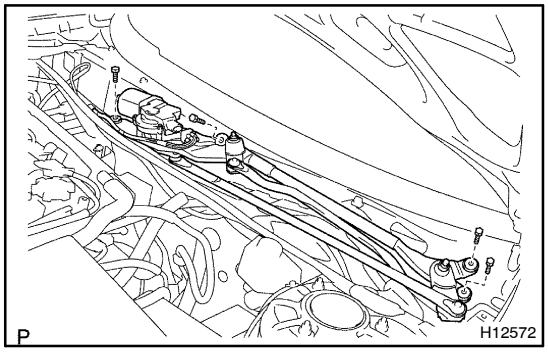

4. REMOVE WIPER MOTOR AND LINK ASSEMBLY

(a) Disconnect the connector.

(b) Remove the 4 bolts and wiper motor and link assembly.

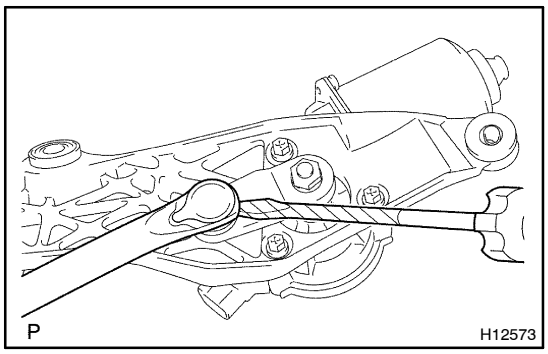


5. REMOVE WIPER MOTOR

(a) Using a screwdriver, disconnect the wiper link from the motor.

HINT:

Tape the screwdriver tip before use.

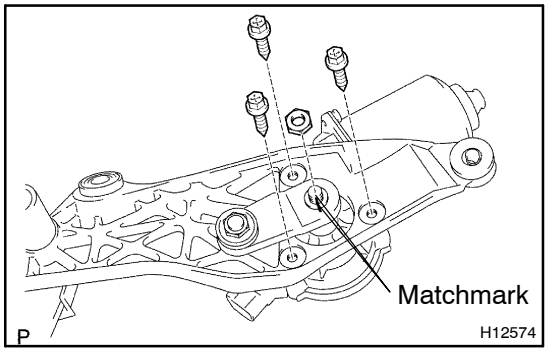

(b) Remove the nut.
(c) Place the matchmarks on the wiper link and motor.
(d) Remove the 3 screws and wiper motor from the wiper link.