
BO2SH–01

INSTALLATION

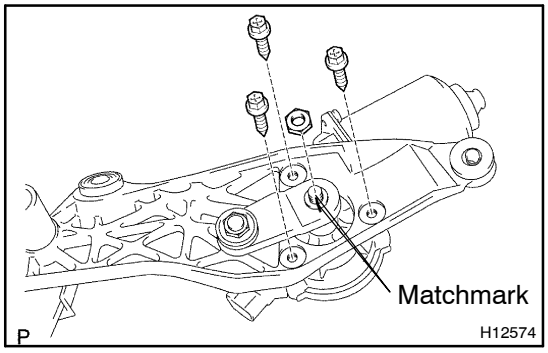


1. INSTALL WIPER MOTOR

(a) Install the wiper motor with the 3 screws to the wiper link.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

(b) Align the matchmarks on the wiper link and wiper motor, then install the nut.


(c) Connect the wiper link to the wiper motor.

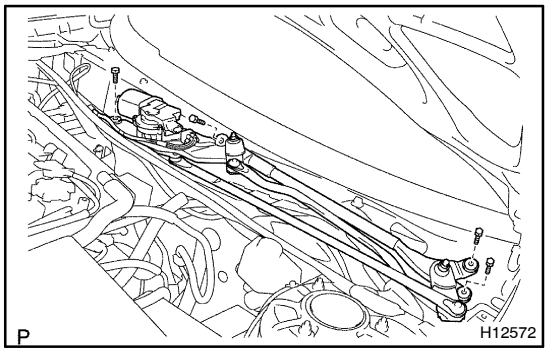

2. INSTALL WIPER MOTOR AND LINK ASSEMBLY

(a) Install the wiper motor and link assembly with the 4 screws.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

(b) Connect the connector.

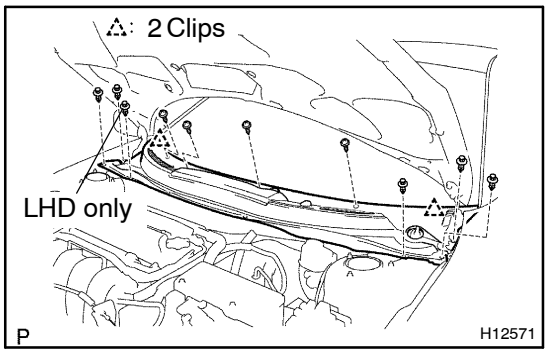

3. INSTALL COWL TOP VENTILATOR LOUVER

(a) Install the 2 washer nozzle to the cowl top ventilator louver.

(b) LHD:
Connect the washer hose, then install the cowl top ventilator louver with the 4 screws and 6 clips.

(c) RHD:
Connect the washer hose, then install the cowl top ventilator louver with the 4 screws and 5 clips.


HINT:
Check that the 2 clips on the back side of the cowl top ventilator louver are surely fixed to the body.

4. INSTALL HOOD TO COWL TOP SEAL

5. INSTALL WIPER ARMS

(a) Operate the wipers once and turn the wiper switch OFF.

(b) Install the wiper arms and tighten the nuts by hand.

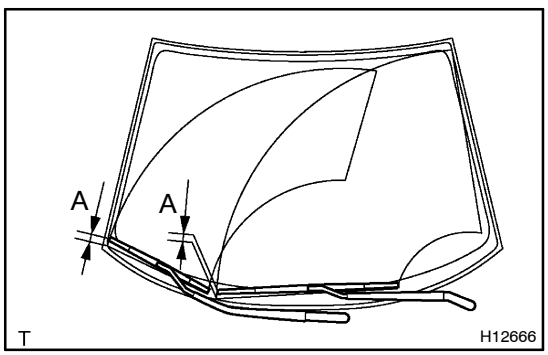

(c) Adjust the installation positions of the wiper arms to the positions as shown in the illustration.
A:30 ± 7.5 mm (1.18 ± 0.295 in.)

(d) Torque the nuts.
Torque: 32 N·m (323 kgf·cm, 23 ft·lbf)

(e) Install the 2 wiper and head caps.