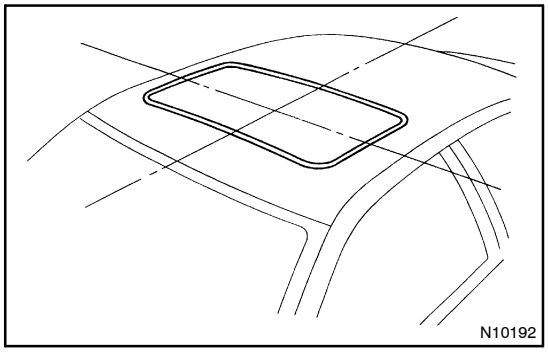


SLIDING ROOF

BO2T2–01

ON–VEHICLE INSPECTION

INSPECT SLIDING ROOF GLASS ALIGNMENT

(a) Start the engine and check the operation time of the sliding roof.
Operation time:
Approx. 6 secs.

(b) Check for abnormal noise or binding during operation.

(c) With the sliding roof fully closed, check for water leakage.

(d) Check for a difference in level between the sliding roof weatherstrip and roof panel.
Except rear end:
0 ± 1.5 mm (0 ± 0.059 in.)
Rear end:
0 + 1.5 mm (0 + 0.059 in.)
0 – 1.0 mm (0 – 0.039 in.)