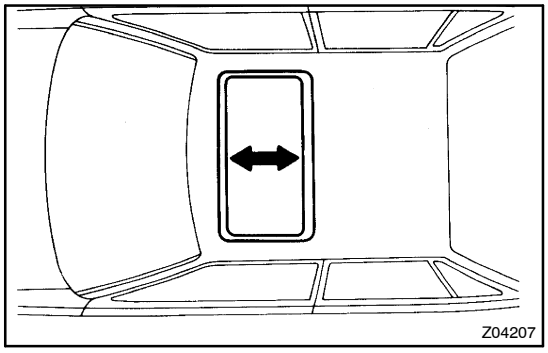


BO2T6–01

ADJUSTMENT

1. ADJUST SLIDING ROOF GLASS FORWARD OR REARWARD

(a) Loosen the sliding roof glass installation bolts.


(b) Adjust the slide roof glass forward or rearward.

2. ADJUST SLIDING ROOF GLASS IN CLEARANCE (Difference in left and right clearance)

(a) When the front or rear alignment is not correct, remove the drive gear and sliding roof glass, then adjust the drive cables.

NOTICE:

Remove the drive gear with the sliding roof fully closed.

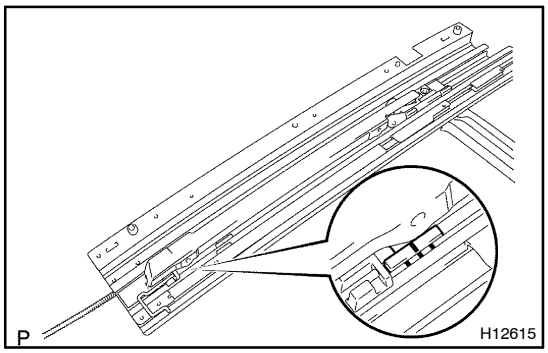

(b) Adjust by sliding the cables forward or rearward to align the 2 marks as shown in the illustration.

(c) Install the drive gear and sliding roof glass.