
BO2TF–01

REMOVAL

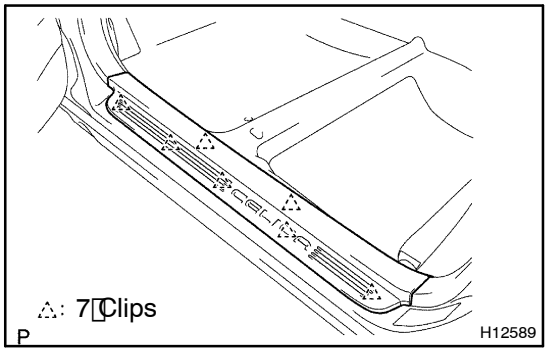

1. REMOVE DOOR SCUFF PLATE

(a) Using a screwdriver, remove the door scuff plate.

HINT:

Tape the screwdriver tip before use.


(b) Employ the same manner described above to the other side.

2. REMOVE PACKAGE TRAY TRIM

3. REMOVE REAR SEAT (See page BO–103)

4. REMOVE LUGGAGE COMPARTMENT MAT

5. w/ Deck floor box:
REMOVE LH AND RH DECK FLOOR BOX

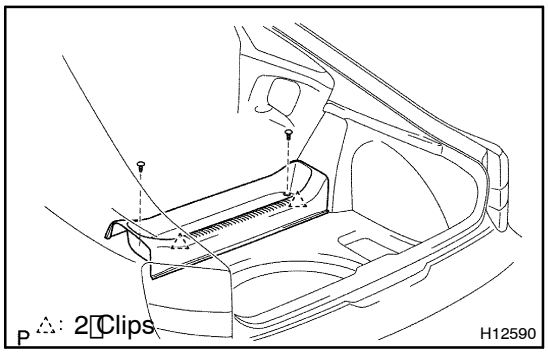


6. REMOVE LUGGAGE COMPARTMENT TRAY

(a) Using a clip remover, remove the 2 clips.

(b) Using a screwdriver, remove the luggage compartment tray.

HINT:

Tape the screwdriver tip before use.

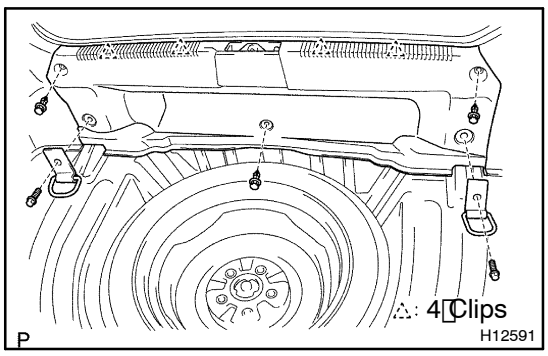

7. REMOVE REAR DECK TRIM COVER


(a) Remove the 2 bolts and 2 hooks.

(b) Remove the 3 clips.

(c) Using a screwdriver, remove the rear deck trim cover.

HINT:

Tape the screwdriver tip before use.

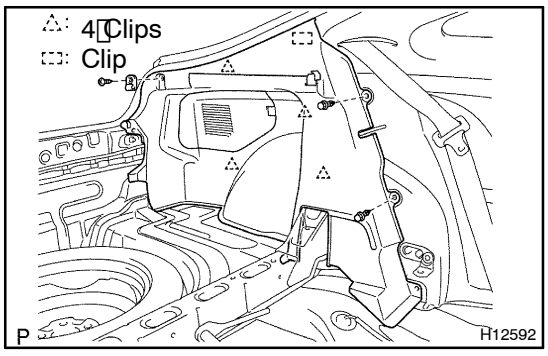

8. REMOVE DECK TRIM SIDE PANEL

(a) Remove the screw and No. 1 luggage compartment trim hook.

(b) RH side:
Using a screwdriver, remove the rear room light, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

(c) Remove the 2 clips.


(d) Using a screwdriver, remove the deck trim side panel.

HINT:
Tape the screwdriver tip before use.

(e) Employ the same manner described above to the other side.

9. REMOVE REAR SEATBACK HINGES
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)


10. REMOVE REAR SEATBACK LOCK STRIKERS
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

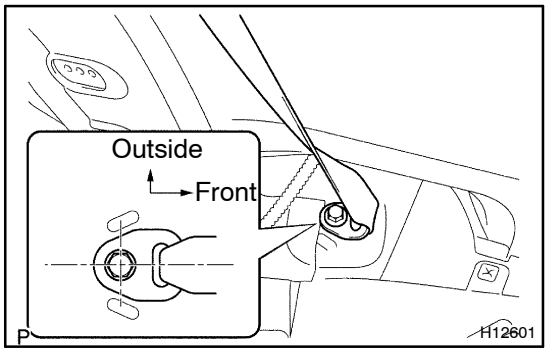

11. REMOVE REAR SEAT OUTER BELT FLOOR ANCHORS

HINT:
At the time of installation, please refer to the following item.
Install the rear seat outer belt floor anchor as shown in the illustration.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

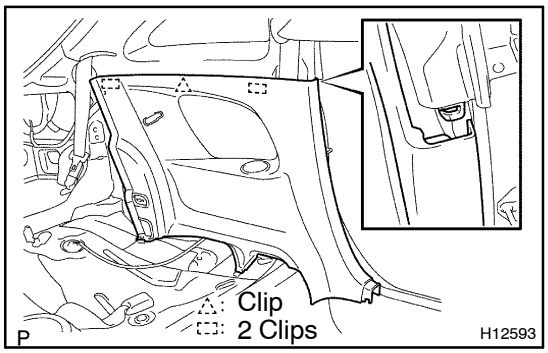


12. REMOVE QUARTER TRIM PANEL

(a) Using a screwdriver, remove the quarter trim panel.

HINT:
Tape the screwdriver tip before use.

(b) Employ the same manner described above to the other side.

13. REMOVE FRONT SEAT OUTER BELT SHOULDER ANCHOR
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

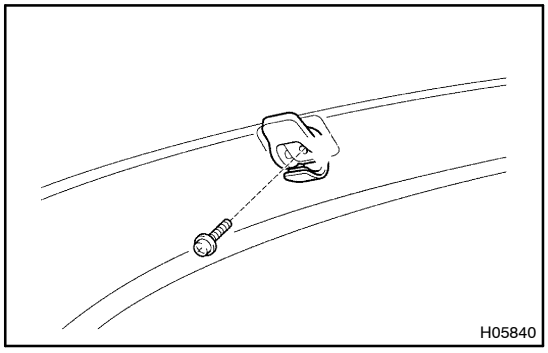


14. REMOVE ROOF SIDE INNER GARNISH

(a) Using a screwdriver, open the cap of coat hook.

HINT:
Tape the screwdriver tip before use.


(b) Remove the screw and coat hook.

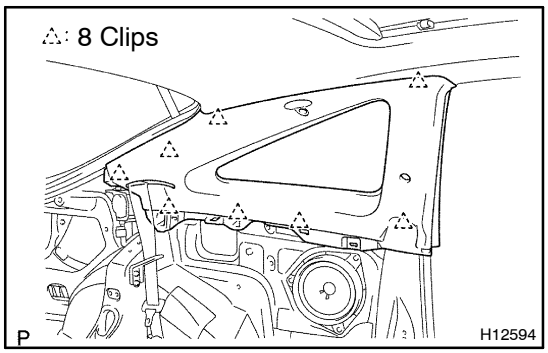

(c) Using a screwdriver, remove the roof side inner quarter.

HINT:
Tape the screwdriver tip before use.

(d) Employ the same manner described above to the other side.

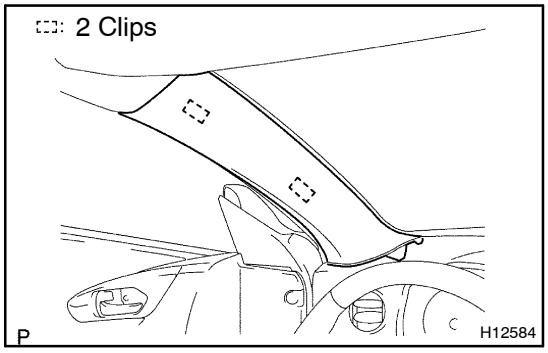

15. REMOVE FRONT PILLAR GARNISH

(a) Using a screwdriver, remove the front pillar garnish.


HINT:

Tape the screwdriver tip before use.

(b) Employ the same manner described above to the other side.

16. REMOVE COWL SIDE TRIMS

17. REMOVE FRONT DOOR OPENING TRIMS

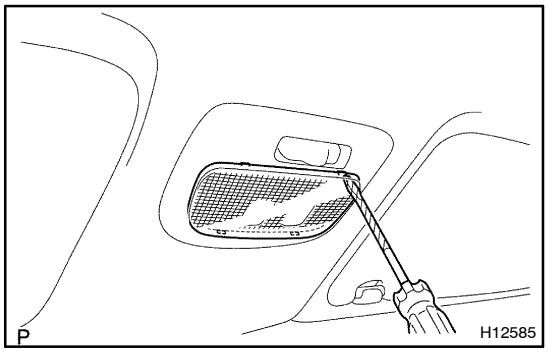


18. w/o Sliding roof:
REMOVE MAP LIGHT ASSEMBLY

(a) Using a screwdriver, remove the lens.

HINT:

Tape the screwdriver tip before use.

(b) Remove the 2 screws and map light assembly, then disconnect the connector.

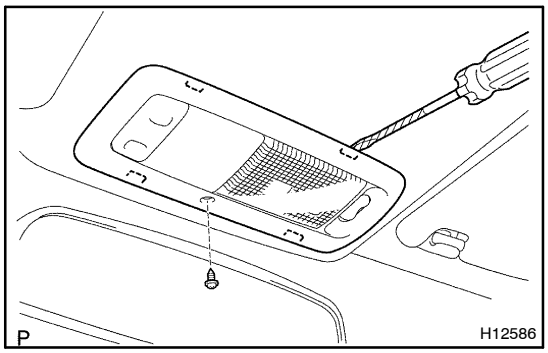

19. w/ Sliding roof:
REMOVE MAP LIGHT ASSEMBLY

(a) Remove the screw.

(b) Using a moulding remover, remove the cover.

(c) Remove the screw and map light assembly, then disconnect the connector.

20. w/ Sliding roof:
REMOVE SUN ROOF OPENING TRIM MOULDING

21. REMOVE SUN VISORS


22. REMOVE SUN VISOR HOLDERS


23. REMOVE ROOF HEADLINING

(a) Using a clip remover, remove the 5 clips.

(b) Remove the roof headlining.

24. REMOVE CLIP STOPPERS

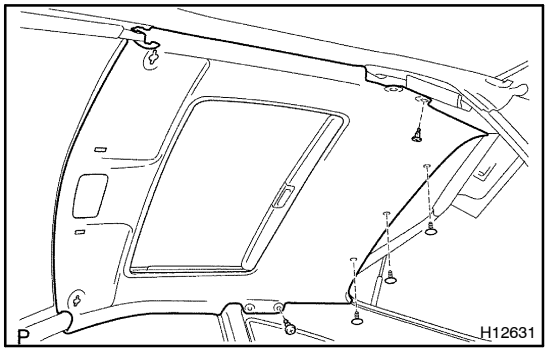

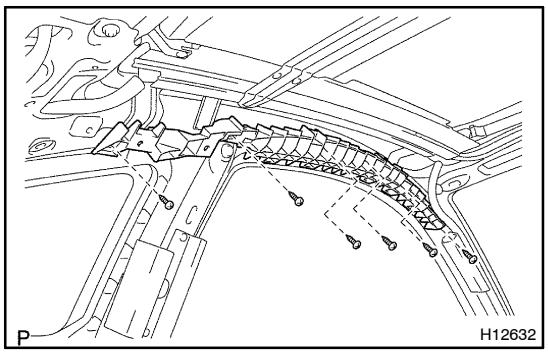

25. REMOVE FRONT ROOF SIDE RAIL PAD

(a) Remove the 6 screws and front roof side rail pad.

(b) Employ the same manner described above to the other side.