
SEAT BELT PRETENSIONER

BO2TU–01

REMOVAL

NOTICE:

- **If the wiring connector of the seat belt pretensioner is disconnected with the ignition switch at ON diagnostic trouble codes will be recorded.**
- **Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.**

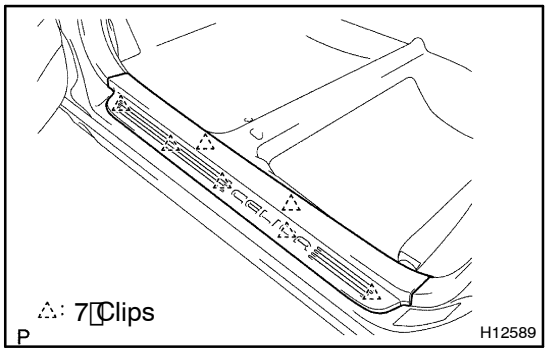

1. REMOVE DOOR SCUFF PLATE

Using a screwdriver, remove the door scuff plate.

HINT:

Tape the screwdriver tip before use.

2. REMOVE PACKAGE TRAY TRIM

3. REMOVE REAR SEAT (See page BO–103)

4. REMOVE LUGGAGE COMPARTMENT TRAY

(a) Using a clip remover, remove the 2 clips.

(b) Using a screwdriver, remove the luggage compartment tray.


HINT:

Tape the screwdriver tip before use.

5. REMOVE LUGGAGE COMPARTMENT MAT

6. w/ Deck floor box:

REMOVE LH AND RH DECK FLOOR BOX

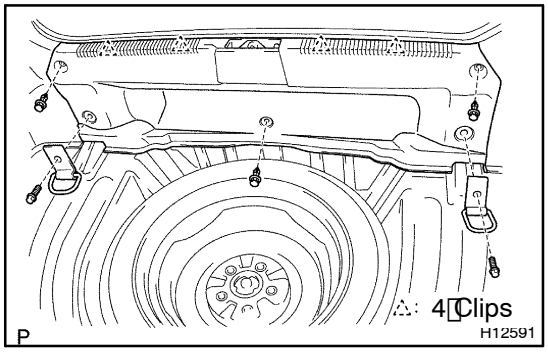

7. REMOVE REAR DECK TRIM COVER


(a) Remove the 2 bolts and 2 hooks.

(b) Remove the 3 clips.

(c) Using a screwdriver, remove the rear deck trim cover.

HINT:

Tape the screwdriver tip before use.

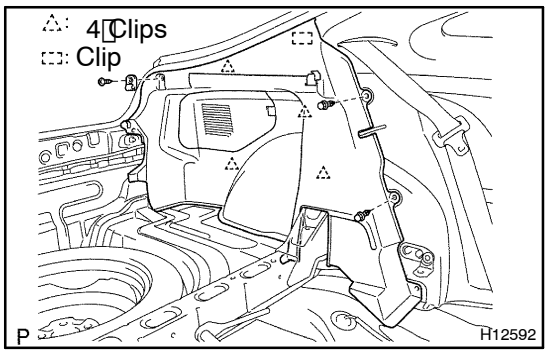

8. REMOVE DECK TRIM SIDE PANEL

(a) Remove the screw and No. 1 luggage compartment trim hook.

(b) RH side:

Using a screwdriver, remove the rear room light, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

(c) Remove the 2 clips.
(d) Using a screwdriver, remove the deck trim side panel.


HINT:

Tape the screwdriver tip before use.

9. REMOVE REAR SEATBACK HINGE

10. REMOVE REAR SEATBACK LOCK STRIKER

11. REMOVE REAR SEAT OUTER BELT FLOOR ANCHORS

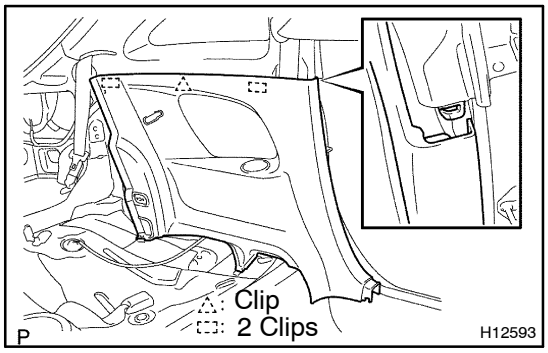

12. REMOVE QUARTER TRIM PANEL

Using a screwdriver, remove the quarter trim panel.

HINT:

Tape the screwdriver tip before use.

13. REMOVE FRONT SEAT OUTER BELT SHOULDER ANCHOR

14. REMOVE FRONT SEAT OUTER BELT FLOOR ANCHOR


15. REMOVE RETRACTOR OF FRONT SEAT OUTER BELT

CAUTION:

Never disassemble the front seat outer belt.

NOTICE:

When removing the retractor of front seat outer belt, take care not to pull the seat belt pretensioner wire harness.

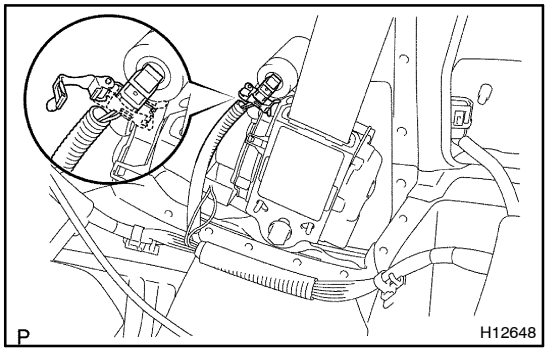

(a) Disconnect the pretensioner connector as shown in the illustration.

CAUTION:

When removing the seat belt pretensioner, work must be started 90 seconds after the ignition switch is turned to the "LOCK" position and the negative (–) terminal cable is disconnected from the battery.

(b) Disconnect the connector.
(c) Remove the 2 bolts and retractor of front seat outer belt.