


BO2TV–01

INSPECTION

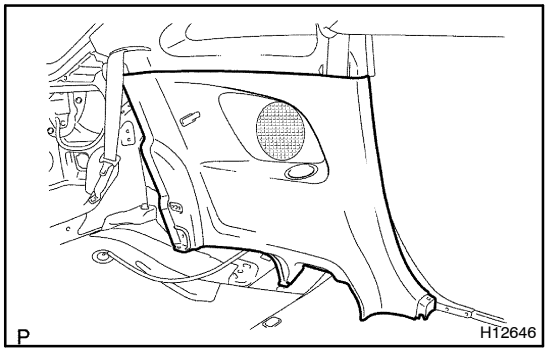

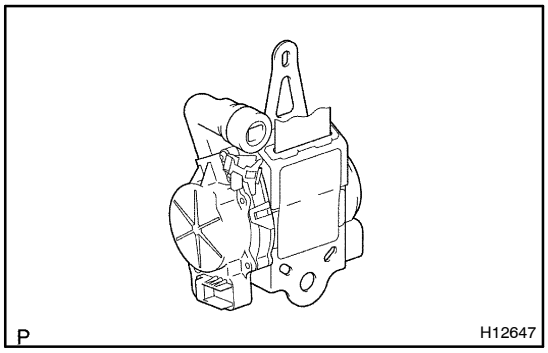

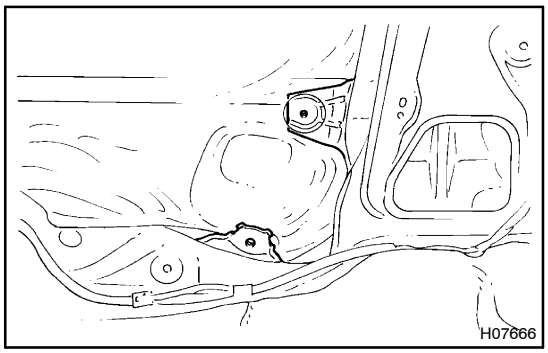

1. PRETENSIONER IS NOT ACTIVATED

(a) Perform a diagnostic system check.
(See page DI–118)

(b) Perform a visual check which includes the following items with the front seat outer belt removed from the vehicle.
- Check for cuts and cracks in, or marked discoloration on the quarter trim panel.
- Check for cuts and cracks in wire harness, and for chipping in connectors.
- Check for deformation of the quarter panel.

CAUTION:
For removal and installation of the front seat outer belt, see page BO–110 and BO–115.

2. PRETENSIONER IS ACTIVATED

(a) Perform a diagnostic system check.
(See page DI–118)

(b) Perform a visual check which includes the following items with the front seat outer belt removed from the vehicle.
- Check for deformation of the quarter panel.
- Check for damage on the connector and wire harness.