
BR15N–01

REMOVAL

1. REMOVE FRONT LH WHEEL
   Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
2. REMOVE MASTER CYLINDER (See page BR–11)
3. DISCONNECT VACUUM HOSE FROM BRAKE BOOSTER
4. w/ ABS:
   REMOVE ABS ACTUATOR ASSEMBLY
   (See page BR–55)

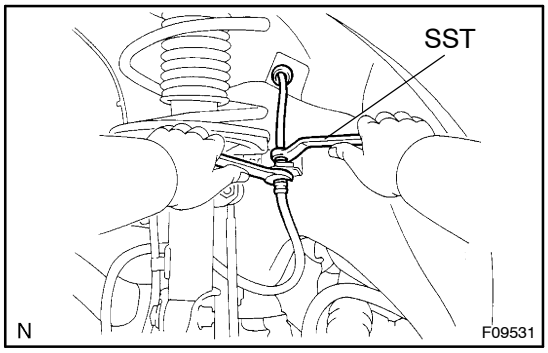

5. REMOVE FRONT LH BRAKE LINE


(a) Using SST and spanner, disconnect the brake line from the flexible hose of front LH brake.
SST 09751–36011

(b) Pull out the brake line with the grommet from the body.

6. REMOVE BRAKE BOOSTER

(a) Remove the lower No. 1 panel.

(b) Remove the return spring, clip and clevis pin.

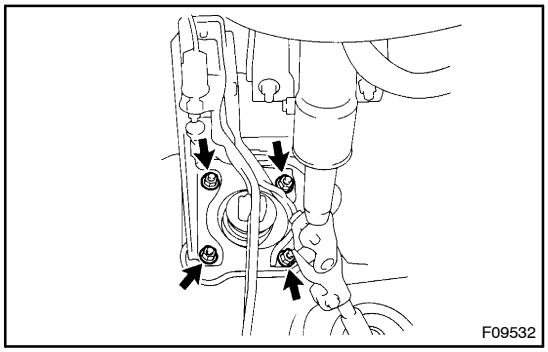

(c) Remove the clevis and 4 nuts.

(d) Pull out the brake booster and gasket.