

BR165–01

DISASSEMBLY

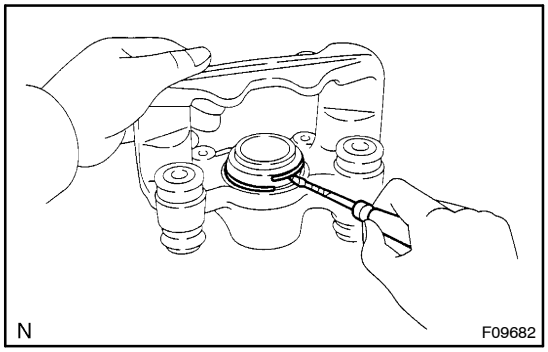

1. REMOVE SET RING AND CYLINDER BOOT

Using a screwdriver, remove the set ring and cylinder boot.

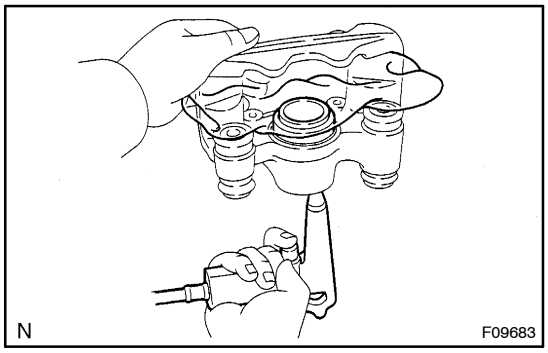


2. REMOVE PISTON

(a) Put a piece of cloth or an equivalent between the piston and caliper.

(b) Use compressed air to remove the piston from the cylinder.

CAUTION:

Do not place your fingers in front of the piston when using compressed air.

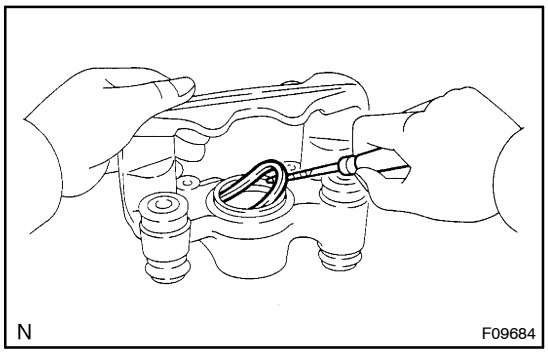

3. REMOVE PISTON SEAL FROM CYLINDER

Using a screwdriver, remove the piston seal.

4. REMOVE 2 SLIDING BUSHINGS AND 3 DUST BOOTS