
BR16J–01

REMOVAL

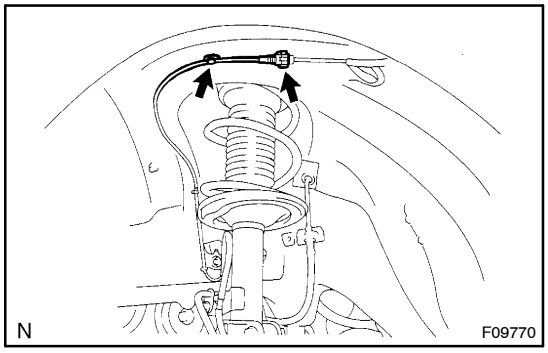


1. DISCONNECT SPEED SENSOR CONNECTOR

(a) Remove the front wheel.
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)


(b) Remove the fender liner.

(c) Disconnect the speed sensor connector and resin clip.

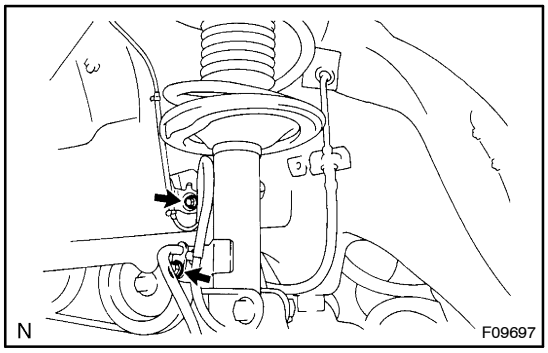

2. REMOVE SPEED SENSOR

(a) Remove the 2 clamp bolts holding the sensor harness from the body and shock absorber.
Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)

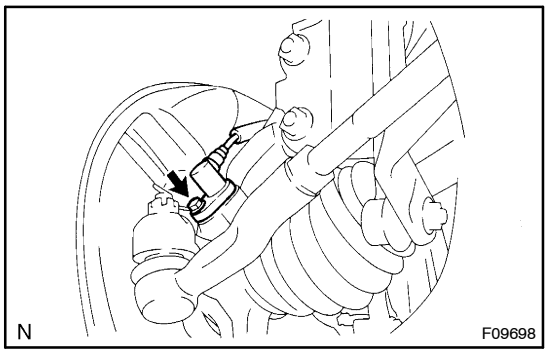

(b) Remove the speed sensor installation bolt from the steering knuckle.
Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)

NOTICE:

At the time of installation, please refer to the following item.

- **There are no foreign objects on the sensor or the part of the knuckle to which the sensor is to be installed.**
- **The sensor is installed flat against the knuckle when you tighten the bolt.**