

CL09F–01

DISASSEMBLY

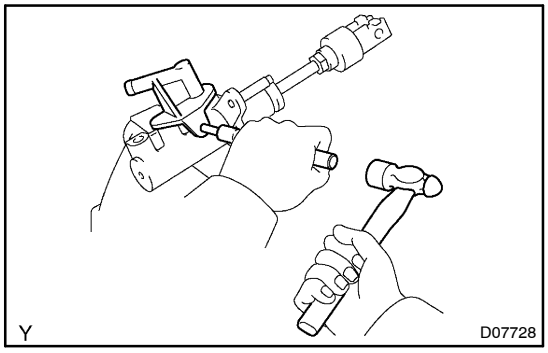

1. LHD:
REMOVE INLET UNION

(a) Using a pin punch (3 mm) and hammer, drive out the slotted spring pin.
(b) Remove the inlet union.
(c) Remove the grommet.

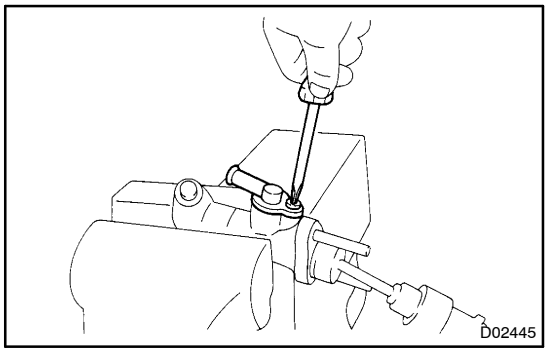


2. RHD:
REMOVE INLET UNION

(a) Remove the screw and inlet union.
(b) Remove the O–ring.

3. REMOVE CLEVIS

Loosen the lock nut to remove the clevis and remove the lock nut.

4. REMOVE BOOT FROM CYLINDER

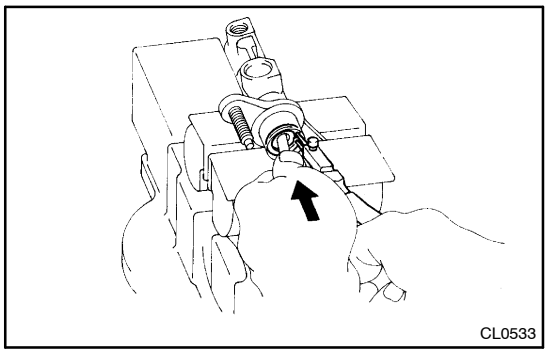

5. REMOVE PUSH ROD

(a) While pushing the push rod, using snap ring pliers, remove the snap ring.
(b) Pull out the push rod and washer.

6. REMOVE PISTON WITH SPRING FROM CYLINDER