

CL052–02

REASSEMBLY

1. COAT PARTS WITH LITHIUM SOAP BASE GLYCOL GREASE, AS SHOWN IN ILLUSTRATION

2. INSERT PISTON WITH SPRING INTO CYLINDER

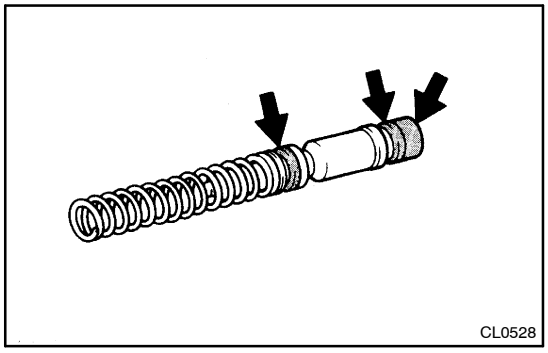

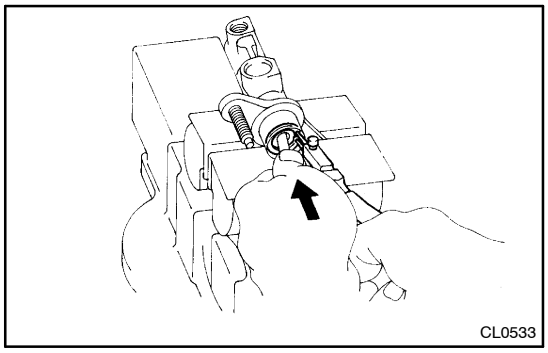


3. INSTALL PUSH ROD

(a) Install the washer to the push rod.

(b) Push the push rod into the piston, using snap ring pliers, install the snap ring.

4. INSTALL BOOT TO CYLINDER

5. TEMPORARILY INSTALL LOCK NUT AND CLEVIS

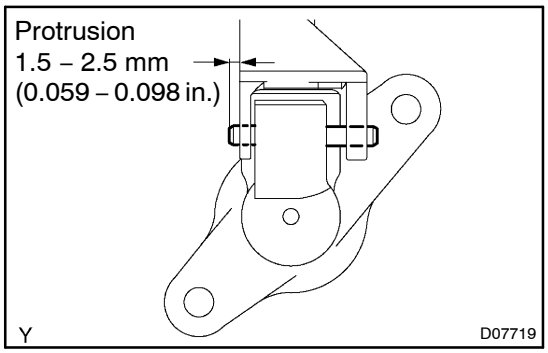


6. LHD:
INSTALL INLET UNION

(a) Install a new grommet.

(b) Install the inlet union.

(c) Using a pin punch (3 mm) and hammer, drive in the slotted spring pin.

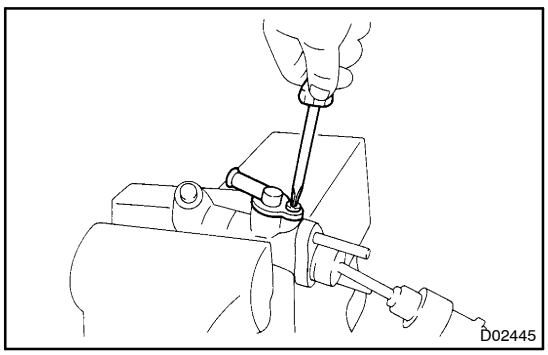

7. RHD:
INSTALL INLET UNION

(a) Install a new O–ring.

(b) Install the inlet union with the screw.