CL09H–01

REMOVAL


1. DISCONNECT CLUTCH LINE

(a) Raise the vehicle.

CAUTION:

Make sure that the vehicle is securely supported.


(b) Remove the LH and RH engine under covers.

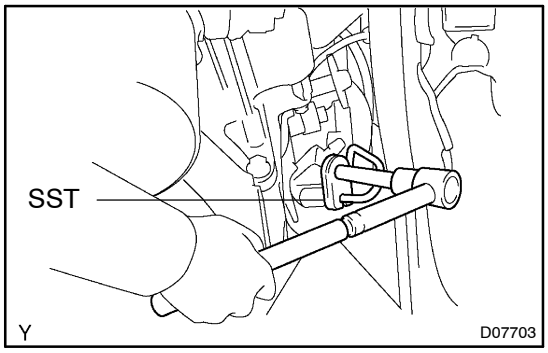

(c) Using SST, disconnect the clutch line.
SST 09023–00100

(d) Use a container to catch the fluid.

(e) Lower the vehicle.

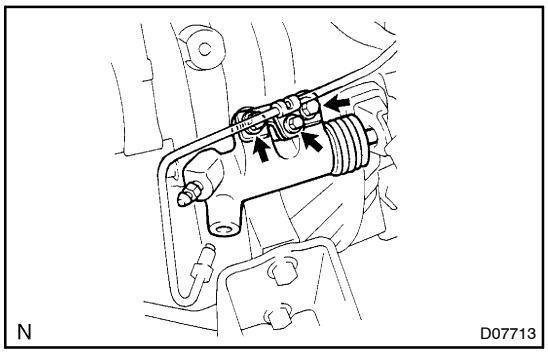

2. REMOVE RELEASE CYLINDER

(a) Remove the air cleaner case assembly with the air hose.

(b) Remove the clutch line clamp set bolt.

(c) Remove the 2 bolts, clutch line bracket and release cylinder.